Full D1 Real Time Pentaplex DVR

User's Manual

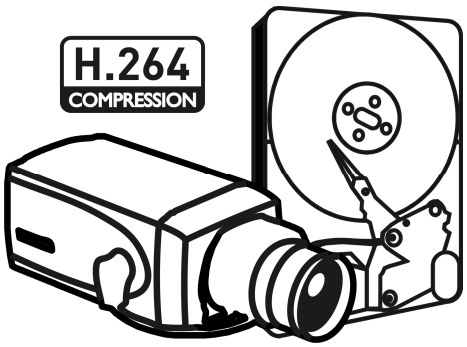

Preface

We welcome you as a new user of the world's best digital video recorder (DVR), and the leading Digital Video Surveillance System. For effective usage, please read this manual carefully. For future reference, please keep this manual close to hand.

Copyright/Authentication/Trademark/Limited Warranty

Copyright

This manual is produced under copyright law. None of its contents may be copied or duplicated without prior approval.

Copyright 2009~

Authentication

CE, FCC, KCC

Trademark

Ethernet(TM) is the trademark of Xerox Corporation.

Microsoft(TM), MS-DOS(TM), Windows(TM logo), Windows(TM) and Windows NT(TM) are the trademarks of Microsoft Corporation, used in the United States and elsewhere.

Limited Warranty

- The manufacturer, importer and agent shall not be responsible for accidental damage (including injury) and other damage caused by inappropriate use or operation of this product.
- The information in this manual is prepared based on the current specifications for the product. The manufacturer is currently adding new functions and will continue to upgrade the product with new technology. All specifications may be changed without notice to individual users.

Cautions

We strongly recommend that users read all safety cautions carefully before operating the product, to operate the product appropriately.

Since the indicated cautions contain critical safety information, they must be fully complied with.

The cautions are categorized into Danger, Warning, Caution and Important.

Danger	Risk of death or serious injury. This is the highest priority danger warning.
Warning	Risk of serious or lesser degree of injury. May also cause damage to the product or to property.
Caution	Risk of minor injury or damage.
Important	Requirements or limitations regarding operation. Users are recommended to read the relevant details carefully so as to operate the product properly and without harm.

The above cautions indicate the degree of damage that may occur due to inappropriate use of the system.

Danger	Risk of death or serious injury. This is the highest priority danger warning.

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT TYPE. DISPOSE OF USED BATTERY ACCORDING TO THE INSTRCTIONS.
- THIS EQUIPMENT IS INDOOR USE AND ALL THE COMMUNICATION WIRINGS ARE LIMITED TO INSIDE OF THE BUILDING.
- Please connect the power cord only to the type of AC outlet indicated in the manual or product specification. If connected to other types of power outlet, fire and electric shock may result.
- Do not expose the product to moisture and dampness. Doing so may result in fire and electric shock.
- Do not place heavy objects on top of the power cord. Damage to the power cord may result in fire and electric shock.
- Do not place containers with liquid or small metal objects on top of the product. Liquid or small metal objects getting into the unit may lead to fire and electric shock.
- Do not score, bend, twist, pull or heat the power cord. Damage to the power cord may lead to fire and electric shock.
- Do not remove the top casing of the product. Doing so may result in electric shock. If internal examination and maintenance are deemed necessary, contact the authorized system vendors or installers.
- Do not modify the product in any way. Doing so may lead to fire and electric shock.
- In case of lightning, immediately turn off the power switch and remove the power cord from the power outlet. Failure to do so may result in fire and electric shock.
- Please use only the power cord supplied with the product. Use of other power cords may result in fire and electric shock.
- In case of smoke, smell or noise, immediately turn off the power switch and remove the power cord from the power outlet. Continued operation of the product may result in fire and electric shock. Request a maintenance service from the authorized system vendors or installers.
- If the product is dropped or damaged, turn off the power switch and remove the power cord from the power outlet. Continued operation of the product may result in fire and electric shock. Users should request a maintenance service from the authorized system vendors or installers.
- Do not touch the product with wet hands. Doing so may result in electric shock.

Warning	Risk of serious or lesser degree of injury. May also cause damage to the product or to property.

- Do not leave the power cord or other cables in passageways. Passers-by may trip and fall.
- Avoid contact with water or beverages. Contact with water or beverages may result in damage that cannot be repaired.
- In case of lightning, immediately turn off the power switch and remove the power cord from the power outlet. The product may otherwise be damaged.
- Excessive current from the product and the camera may result in an electric shock. Connect the power cord to an external device only when the products themselves are disconnected from their power supply.

Caution	Risk of minor injury or damage.

- If a foreign substance is stuck to the product, remove it using a soft cloth or tissue. Do not use chemical agents (thinner, solvent, etc.) to remove the substance.
- Do not operate or store the product in the following places.
  - An area that is either too cold or too hot
  - An area of high humidity, or in front of an air-conditioner, or in places subject to sudden temperature changes
  - An area where there is excessive dust
  - Areas where heat from the product cannot be emitted through both of the product's side ventilation openings
- Do not place credit cards/telephone cards/bank account books/tickets and other objects with magnetic properties near the product.
- Static electricity may cause damage to the internal parts of the product. Please remove static electricity from your body before touching the rear panel and internal electronic parts of the product.
- If this product is damaged beyond repair or reaches its maximum service life, dispose of it in compliance with local laws and regulations regarding the disposal of lead and plastic waste.

Important	Requirements or limitations regarding operation. Users are recommended to read the relevant details carefully so as to operate the product properly and without harm.

- The product may not work properly if the power source is unstable or and if electric shock occurs. Make sure the correct rated power is available.
- The product is designed to be proof against electric power failures; however, damage may occur as a result of power failure. Current data may be damaged or data might not be recorded. Make sure to use an Uninterruptible Power Supply (UPS).
- Since the product is designed to record video data on the hard disk, an error in the hard disk or other miscellaneous errors might prevent the product from recording properly. Periodic maintenance is required for proper operation of the product.
- The product is designed for users to configure their own interface. However a user configuration error could lead to operation malfunction. This product should be set up by certified installers only.
- Since the product is connected - and tightly coupled - to exterior accessories (camera, sensor, LAN, Hard Disk, etc.), there is a risk of malfunction from external causes. Ensure periodic maintenance by the certified installers.
- Use the rack mounting handle provided with the product for installation.
- In this product, 1 Kbyte equals 1,024 bytes, 1 Mbyte equals 1,024,000 bytes and 1 Gbyte equals 1,024,000,000 bytes.

Contents

Preface 0

Preface 1

Copyright/Authentication/Trademark/Limited Warranty 1

Cautions 1

Contents 4

Chapter 1. Introduction 7

1. The System 7

2. General Features 7

3. Specification 8

Chapter 2. System Installation 9

1. Package Contents 9

2. Connecting Devices 10

8/16 Channel Premium DVR 10

3. Cautions 12

Chapter 3. Using DVR 13

1. Basic Operation 13

1-1. Front Panel & IR Remote Controller 13

Description 13

1-2. Turning on the System 14

1-3. Menu Bar 15

1-3.1 VGA/CVBS 15

1-3.2 HDMI 16

1-4. Display Icons 17

1-5. User or Admin Login 17

1-6. The Main Menu 18

1-7. Contextual Menu 20

2. DVR Configuration 21

2-1. SYSTEM 21

2-1-1.MENU>SYSTEM>Information 21

2-1-2. MENU > SYSTEM > Date & Time 22

2-1-3. MENU > SYSTEM > User 22

2-1-4. MENU > SYSTEM > Quick Setup 23

2-1-5. MENU > SYSTEM > System Log 24

2-2. DEVICE 25

2-2-1. MENU > DEVICE > Camera 25

2-2-2. MENU > DEVICE > Audio 26

2-2-3. MENU > DEVICE > Alarm 26

2-2-4. MENU > DEVICE > Keyboard 27

2-2-5. MENU > DEVICE > RS232 & RS485 27

2-3. DISPLAY 28

2-3-1. MENU > DISPLAY > Display 28

2-3-2. MENU > DISPLAY >VGA 28

2-3-3. MENU > DISPLAY >CVBS 28

2-3-4. MENU > DISPLAY >HDMI 29

2-3-5. MENU > DISPLAY >SPOT 30

2-4. RECORD 31

2-4-1. MENU > RECORD > Storage 31

2-4-2. MENU > RECORD > Record 32
2-4-3. MENU > RECORD > Archive 33
2-4-4. MENU > RECORD > Utilities 34
2-5. NETWORK 35
2-5-1. MENU > NETWORK > Address 35
2-5-2. MENU > NETWORK > DDNS 36
2-5-3. MENU > NETWORK > Notification 36
2-5-4. MENU > NETWORK > Transmission 37
2-6. EVENT 38
2-6-1. MENU > EVENT > Sensor 38
2-6-2. MENU > EVENT > Motion 39
2-6-3. MENU > EVENT > Video Loss 41
2-6-4. MENU > EVENT > Text-In 42
2-6-5. MENU > EVENT > System 43
3. Playback 45
3-1. Go to Time 46
3-2. Calendar Search 46
3-3. Event Search 46
3-4. Text-In Search 47
3-5. Backup Data Playback 47
3-6. Playback Control 47
4. Backup 48
4-1. Backup 48
4-2. Instant Backup 49
4-3. Clip Maker 49
Chapter 4. Remote Software NEMON 50
1. Using NEMON 50
1-1. Starting the Software 50
1-2. Site Set Up 52
1-3. Favorite Set Up 54
1-4. Site List Panel 55
1-5. Tool Panel 56
1-5-1. DVR Status 56
1-5-2. PTZ 56
1-5-3. TEXT-IN 57
1-5-4. GPS 57
2. Remote Playback 58
2-1. Calendar Search 58
2-2. Event Search 59
2-3. Text-In Search 60
2-4. Saving the recorded data 61
2-5. Play Backup Data 62
2-6. Play Independent HDD Data on PC 63
3. Setup 64
3-1. Nemon Setup 64
3-2. Remote Setup 68
3-3. Remote Upgrade 69
4.Nemon Callback 70
Appendix A. Remote Access Using I.E. 72
Appendix B. How to set DDNS using router 73
1. Domain Name Creation 73

2. Router Configuration 75
3. DVR Configuration 76
Appendix C. Digital Signage Maker 77
How to use Digital Signage Maker 78
Appendix D. PFRM Instructions 80
1. Outline 80
2. How to connect 81
Appendix E. NEMON Network Archiver Instructions 83
1. Outline 83
2. Feature 83
3. How to use Network Archiver 84
4. Set Up 88
5. Reference 94
COMPLIANCE NOTICE OF FCC: 95
WEEE (Waste Electrical & Electronic Equipment) 95
ROHS Compliance 95

Chapter 1. Introduction

1. The System

This product is the one that you are looking for quite long time. Eventually, The DVR which is high performance real time DVR based on H.264, you can enjoy the full benefit of latest compression H.264 and be free from headache because of stability of the DVR.
This product can distinguish the recorded data clearly compare to MPEG4 due to the motion artifact and will find the tremendous difference. It's your turn to enjoy the true solution for Digital Video Recorder with brand new product.

2. General Features

- True H.264 Standard Video Compression
- Embedded Linux System to give you the Ultimate Reliability
- Dedicated DB Structure for Stability
- Various Recording Resolution D1/Half D1/CIF
- CMS (Central Monitoring System)
- Easy Setup same like DVR GUI in CMS
- Web Monitoring, Searching and Setup
- Own Media Player for Backup Playback
- Dual USB Ports for Mouse operation, Multi USB Hub and Backup
- Up to Four SATA HDD and No Limitation of Capacity
- E-SATA support (up to 4)
- Two- Way Audio
- Multiple DVRs can be operated with One Keyboard Controller
- Text-In & Relay Output Support
- Real Time Recording and Multi Ch. Playback
- 8/16 Audio Input support
- Archiving Function to Secure the High Stability for Recorded Data
- 4 Spot Output with Event Pop up Function
- iPhone, Android Phone Support
- Digital Zoom feature
- HDMI support
- Independent Dual Display(only in VGA&CVBS mode)

Dual Display allows user to use both VGA and CVBS outputs same time with different display options. Two different and individual display modes can be set on each monitor output. Also Live Monitoring on one monitor and Playback on another Monitor can be displayed and controlled at the same time. This function will provide such high flexibility and efficiency for monitoring options for users.

3. Specification

Model		8 Channel Premium DVR	16 Channel Premium DVR
Video	In	8 BNC	16 BNC
	Out	HDMI or 1VGA,& 1 BNC Main, 4 Spot Output	
Audio	In	8 RCA (8 Line in)	16 RCA(16 Line in)
	Out	1HDMI or 1 RCA (Line Out)	
Device	Sensor In	8 TTL (7+Emergency)	16 TTL (15+Emergency)
	Alarm Out	4 Relay + 4 TTL	4 Relay + 12 TTL
	I/O Interface	RS232, RS485, USB2.0 x 2	
Display	Speed	Real Time	
	Resolution	720 x 480 (NTSC), 720 x 576 (PAL), 1280 X 1024 (VGA) 1920 X 1080 (HDMI)	
	Split Screen	1,4,6,9,PIP,Digital Zoom	1,4,6,9,13,16,PIP,Digital Zoom
Recording	Compression	H.264 Codec	
	Speed / Resolution	240fps@D1(NTSC) 200fps@D1(PAL)	480fps@D1(NTSC) 400fps@D1(PAL)
	Picture Quality	Very High, High, Standard, Low	
	Mode	Time-lapse, Event, Time & Event, Emergency (Panic)	
Playback	Display	1, 4, 6, 9, Digital Zoom	1,4,6,9,13,16,Digital Zoom
	Search Mode	Calendar Search, Event Search, Text-In Search, Go to Time	
	Playback Mode	Multi Channel Normal & Reverse Play, RW & FF (x2, x4, x8, x16, x32), Frame to Frame, Pause	
Network	Interface	Ethernet (10/100/1000 Base)	
	Protocol	TCP/IP, HTTP, DHCP, ADSL(PPPoE)	
	Application	Live, Playback, Setup, Notification (Callback, E-Mail)	
	Web Browse	Internet Explorer 7 or higher	
	Mobile Support	iPhone, Android Phone (Real Streaming)	
Storage		3xSATA HDD & 1xSATA ODD (or max. 4 SATA HDD w/o ODD), E-SATA(max 4 SATA)	
Backup		CD & DVD-RW, External HDD(USB), External USB Memory	
Control		Front Panel Button, USB Mouse, IR Remote Controller, Joystick Controller	
OSD		Graphic User Interface (Multilingual)	
Approval		FCC, CE, KCC	
ROHS		ROHS Compliance	
Power Consumption		DC12V, 9A (108W)	
Operating Temperature		5°C ~ 40°C / 41°F~104°F	
Operating Humidity		0%~80% / non-condensing	
Dimension		430(W)x92.5(H)x428(D)mm / 16.9(W)x3.64(H)x16.8(D)inch	
Weight		5.38Kg / 11.86lb (without HDD,ODD)	

Chapter 2. System Installation

1. Package Contents

The following components are included in the product:

DVR Unit	
DC Adaptor	
Power Cord	
CD (User's Manual & Network S/W)	
Remote Controller	
Quick Guide	

2. Connecting Devices

8/16 Channel Premium DVR

The rear panels of the 6/18 channel premium DVR comprise the following:

[8 Channel Premium Model]

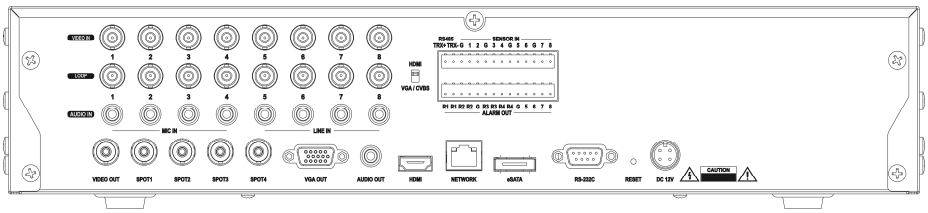

[16 Channel Premium Model]

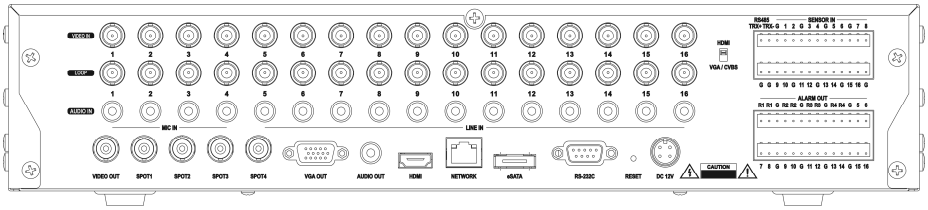

Video Input

Connect the coaxial cables from the cameras to the BNC video connectors.

Loop-Through Video

Connect the coaxial cables from the Loop BNC connector to another device.

Audio Input

The DVR can record audio up to 16(8) sources. Connect the audio sources to the Audio-In RCA connectors. All channels need external pre-amplifiers.

It is the user's responsibility to determine if local laws and regulations permit recording audio.

Video Output



Select display mode on rear panel and connect selected devices (HDMI, VGA and CVBS). Select switch before power on system. It may display different display when using VGA/CVBS mode. . For example, Live display on a monitor and playback on other monitor. Dual Display feature provides user convenient feature by user's own selection.

Connect the spot monitors to the SPOT1~4 connectors as needed.

Caution: Select switch first before power on system.

ETC

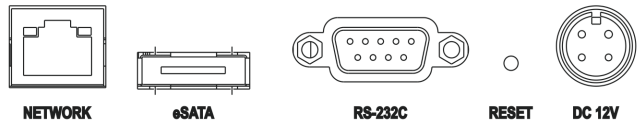

- **Network**: Connect a Cat5 cable with an RJ-45 connector to the DVR connector for remote monitoring, remote playback, remote setup. See ***Chapter 3-2. DVR Configuration*** for configuring the Network connections.
- eSATA : connect eSATA storage devices.

Note: Do not connect or disconnect when DVR is operating. When connect eSATA device, turn DVR off and connect and turn on the System. To plug out eSATA, turn DVR off first and unplug device.

- **RS-232C**: An RS-232C connector is provided to connect an ATM or POS machine for Text-In function. Use a cable with a DB9 (female) connector to connect to the DVR.
- **Reset**: The DVR has a Reset switch that will only be used to return all the settings to the original factory settings. To reset the unit, turn the DVR off first. Turn it on again while poking the straightened paperclip in the reset hole. Hold the switch until the DVR is initializing.
- **Power Connector**: Connect adapter cable to the power connector on the rear panel. (DC12V, 9A) Input AC power to the adapter. (free voltage from 100V to 240V, 50/60Hz)

Sensor Input

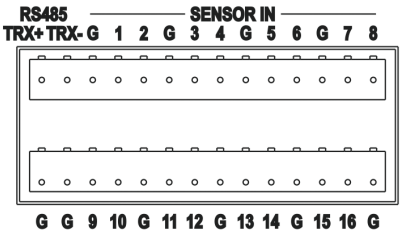

16(8) sensor input connectors are provided to connect external devices. You can use sensors to signal the DVR with event. To make connections on the terminal block, press and hold the button and insert the wire in the hole below the button.

Alarm Output & RS485

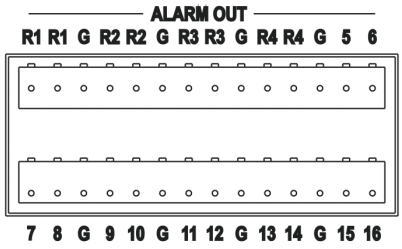

16(8) alarm output connectors are provided to connect external alarms such as sirens or lights. 4 alarm output connectors have internal relays (Premium model only) and the others are TTL signals.
The RS485 connector can be used to control PTZ cameras. The DVR can also be controlled remotely by a control keyboard.

- **Front USB**: Two USB ports are provided to connect external devices like HDD, Flash memory for Backup, System upgrade or USB mouse on the front panel.

Note: This manual covers the 8-channel and 16-channel DVRs. The DVRs are identical except for the number of cameras, audio inputs and alarms. The illustrations and descriptions in this manual refer to the 16 channel model.

3. Cautions

- Avoid installing the product where there are direct rays or it is hot by locating near from heat generator. (May cause fire)
- Do not put vase, flowerpot, cup, cosmetics, drug, and anything the contain water on product. (May cause fire or electric shock, and it may injure people by falling)
- Do not insert or drop any metal object (coin, hair pin) or flammable object (match, paper) into air hole. (May cause fire or electric shock)
- Do not put any heavy object on it. (May injure people by being fell or destroyed.)
- Put power plug surely not to be moved. (If not, this may cause fire.)
- Unplug power plug and antenna when there are thunders and lightening. (May cause fire.)
- For cleaning the product, wipe surface with dry towel. Using chemical agent or cleaner may change the color and unpeel paint.
- Do not put several plugs at same time. (May cause electric shock.) If there is smoke or strange smell, stop operation. In this case, turn the power off and unplug it, and then contact our service center. (If you keep using it, this may cause fire or electric shock.)
- Do not unplug by pulling cord. (If cord is damaged, it may cause fire or electric shock.)
- Do not plug or unplug with wet hands. (May cause electric shock.)
- Keep the power cord untwisted. (May cause fire or electric shock.)
- Use proper adapter. (Using too much electric power may cause fire or electric shock.)
- Do not install it at where exposed to rain and wind and water drop. (May cause fire, electric shock and transformation.)
- Keep away from fire. (May cause fire.)
- Do not disassemble or remodel on your own. (May cause malfunction or electric shock.)
- Do not put next to flammable materials like flammable spray. (May cause fire.)
- Do not install it at a place with too much dirt. (May cause fire.)
- Do not install it on unstable places like shaking table and inclined place or shaking place. (May injure users by falling down or being upside down.)
- Do not put an heavy object on power cord or avoid it from being pressed by the device. (May cause fire or electric shock.)
- In case of using extension cord, do not use several devices at same time. (May cause fire with abnormal heating of extension.)
- When there are dirt on power plug pin or power outlet, clean it nicely. (May cause fire.)
- Do not damage on power cord or plug, and bend or twist or pull too much, and put it between other objects or heat. If power outlet insertion part is not tight, do not use it. (May cause fire or electric shock.)
- Do not drop or give a shock to the product. (May injure people or cause malfunction.)
- Do not touch power adaptor or signal controller. (May cause electric shock.)
- Do not put any object too close to block cooling fan. (May cause fire.)
- In case of exchanging batteries with improper type, there might be danger of explosion.
- For used batteries, throw away separately from other garbage.
- When you take out batteries, avoid children from eating them by mistake. Keep them away from children. (If a child ate them, contact a doctor right away.)

Chapter 3. Using DVR

1. Basic Operation

1-1. Front Panel & IR Remote Controller

The DVR should be correctly installed before proceeding. The location and the shape of the buttons may vary depending on the DVR model.

Control	Description
USB Port	Two USB ports are located on the front panel.
Camera Buttons (1~0)	Pressing camera buttons and Enter button will cause the selected camera to display full screen. Buttons are used to enter passwords.
MENU / EXIT Button	Enters the Setup Menu. User will need to enter the authorized password to assess Setup. In Playback mode, MENU button displays the Playback Menu.
DISPLAY Button	Changes the screen display mode in the current screen or playback screen.
SEQUENCE Button	Displays live channels sequentially.
Up, Down, Left, Right Arrow, ENTER Buttons	These are used to change settings for the product in MENU mode or used in PTZ control mode. (pan, tilt)
BACKUP Button	Copies recorded data to an external storage device.
PLAYBACK Button	Changes to the playback mode from the live mode.
❚❚ PAUSE Button	Under playback mode, the button can be used to pause the playback screen. - Display menu to save PTZ preset under PTZ mode.
▶ PLAY Button	Plays the video forward. Press the button repeatedly to increase play speed up to max 32 times (1, 2, 4, 8, 16, 32 times) faster. Use this button to move right when setting the menu. - Focus on far distance under PTZ mode.
◀ R.PLAY Button	Plays the video backward. Press the button repeatedly to increase play speed up to max 32 times (1, 2, 4, 8, 16, 32 times) faster. Use this button to move right when setting the menu. - Zoom Out under PTZ mode.
❚▶ STEP FORWARD Button	Move forward by one frame under Pause. Use this button to move up when setting the menu. - Focus on near distance under PTZ mode.
◀❚ STEP BACKWARD Button	Move backward by one frame under Pause. Use this button to move down when setting the menu. - Zoom In under PTZ mode.
⏏ EJECT Button	It will open or close the backup drive such as CD-RW or DVD

	- Display menu to load PTZ presets under PTZ mode.
PTZ Button	Changes to the PTZ control mode from the live mode.
ZOOM Button	Zooms the current image on the screen.
PIP Button	Changes to PIP screen mode from live screen.
FREEZE Button	Freeze the current screen.
AUDIO Button	Selects a camera for live & playback audio output.
SPOT Button	Assigns the SPOT output channel.
OSD Button	Turns on/off the OSD display.
LOG Button	Checks the system's log information.
ID Button	Selects the DVR system ID. (Remote controller only)
E.REC Button	Pressing the E.REC button stars Emergency Recording Mode of all camera channels, and displays "!" on the screen. Pressing the button again will stop E.REC mode.
Status LED	Power, HDD, Network, Alarm

1-2. Turning on the System

Connecting the power cord will turn on the power of DVR. It will take approximately 40 to 50 seconds for the system to be initialized. Once the system is initialized, it will display live screen, and begin to record video automatically.

Note: To turn off the system, select SHUTDOWN under main menu (MENU > SHUTDOWN) and unplug the power cord when the shutdown message appears.

Note: When installing the HDD for the first time, the HDD should be formatted first.
"MENU > RECORD > Storage > HDD format"

1-3. Menu Bar

1-3.1 VGA/CVBS

The menu bar will appear on the bottom of the screen as shown below.



	Switch to live mode from playback
	Swich to playback mode from live
	Pressing the Menu will bring up the main menu list.
	Display camera numbers displaying on Spot
	Shows the % of HDD being used.
	Turns on when the HDD is set to be overwritten.
	Sequence display mode.
	Turns on when the system is connected to the network.
	Turns on when the Alarm is being activated.
	Mirroring mode
	Archiving Mode
	E.REC (Emergency Recording) Mode.
	Displays date & time.
	IR Remote Controller

1-3.2 HDMI

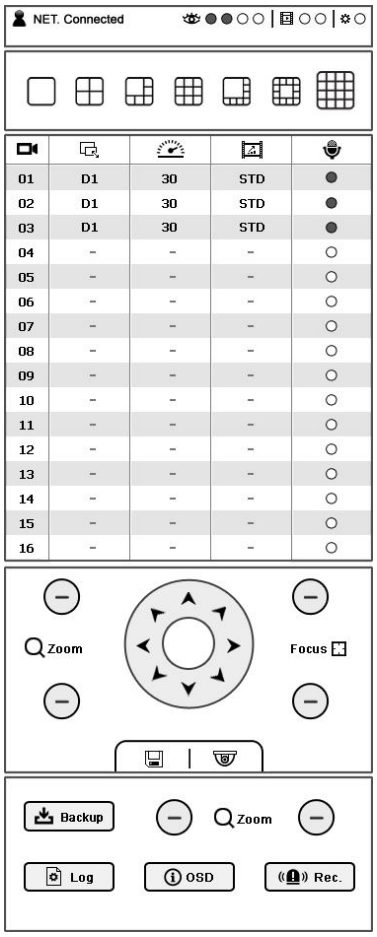

- Remote connection status: Shows remote connection status. Shows Live/Playback/Setup and display information when mouse cursor on its icon. (ip address/user)
-. Layout change and display : display current layout and change to select layout
- Recording status : display current recording status
- PTZ Control : Run Pan Tilt zoom control on PTZ mode.
- Backup : Shows backup .
- Zoom : Camera zoom control on zoom mode.
- Log : Shows log
- OSD : Shows OSD status. (None/OSD/OSD+status bar)
- Emergency Record : Emergency record를 on/off

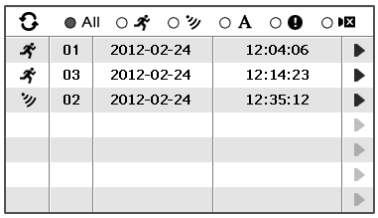

- event log : shows the latest event log when shift to playback mode.

1-4. Display Icons

	No Recording
	Recording (Red)
	E.REC (Emergency Recording)
	Event Recording (Red)
	Pre Event Recording (Blue)
	Motion Detection
	Sensor Detection
	Text In
	PTZ Camera
	Instant Backup
	Clip Maker (Blue)
	Backup (Red)
	Video Loss

1-5. User or Admin Login

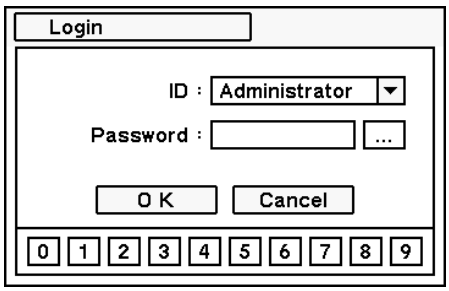

Press MENU to enter main menu screen. Login in screen appears to enter ID (Administrator or User) and Password. Password can be set up to 8 numbers by the combination of numbers from 0 to 9. The factory default password is 'none' so press OK to log in to the system for a first time log in. Password can be set under password set up option (MENU > SYSTEM > User). System will be automatically log out if it is not in-use for sometime. This "Auto Logout Time" can be set under password set up option (MENU > SYSTEM > User).

1-6. The Main Menu

The Main Menu of DVR consists of SYSTEM, DEVICE, DISPLAY, RECORD, NETWORK and EVENT. And each menu consists of various sub menus that allow detail set up of the system. Use Mouse, Remote Controller or Front Buttons to access to each menu.

Note: Please make sure the system log out is done when the system setting or operation completed to prevent any unauthorized changes of system settings or operations.

MAIN MENU	SYSTEM	Information
		Date & Time
		User
		Quick Setup
		System Log
	DEVICE	Camera
		Audio
		Alarm
		Keyboard
		RS232 & RS485
	DISPLAY	Display
		VGA
		CVBS
		HDMI
		SPOT
		Digital Signage
	RECORD	Storage
		Record
		Archive
		Utilities
	NETWORK	Address
		DDNS
		Notification
		Transmission
	EVENT	Sensor
		Motion
		Video Loss

		Text-In
		System
	LOGOUT	
	SHUTDOWN	

1-7. Contextual Menu

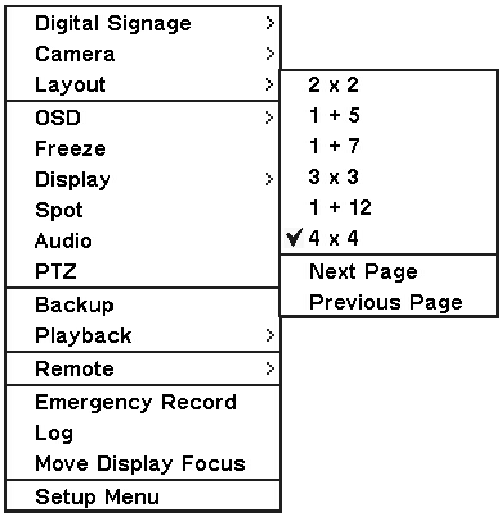

Additional Contextual Menu screen appears by pressing right button on the Mouse. Layout option allows changing Camera on the monitor. Select preferred camera display option on the monitor.

Digital Signage: Select Digital Signage output.
Camera : Select camera no.
Layout : Select display mode (8/16 ch. DVR Only)
OSD : Select OSD display option
Text-In Info.: On/Off Text-In OSD.
Freeze : Pause current image display
Sequence : Begin sequence display
Zoom : Zoom in image by X2
PIP : Select PIP mode and camera
Spot : Select each spot monitors' display
Audio : Select Audio outs
PTZ : Select PTZ options
Backup : Select backup options
Playback : Playback recorded data
Remote : Select PC Free Remote Monitoring option (refer to Appendix D. PFRM)
E. Record : Start Emergency Recording
Log : Select System/Event log
Eject : Eject installed ODD
Setup Menu: Enter Main setup menu

For more information on Contextual Menu please refer to 2. DVR Configuration.

2. DVR Configuration

2-1. SYSTEM

Under SYSTEM menu, System configuration options for general Information, Date &Time, User, Quick Setup and System Log can be selected.

2-1-1.MENU>SYSTEM>Information

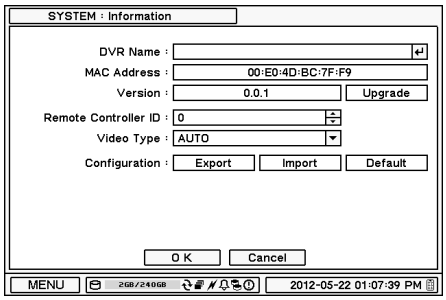

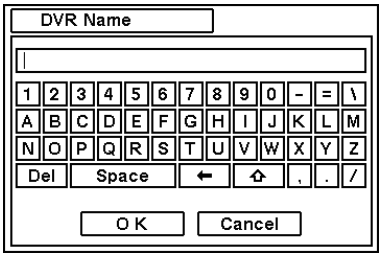

In the Information screen, DVR Name, System Version, Upgrade, Mac Address and Configuration options can be selected. Highlight and press DVR Name ↵ to enter or change DVR name. Name the DVR by using the virtual keyboard.

To Upgrade the system, save the upgrade file to USB Flash Memory and connect it to DVR. Once the Device is connected, press Upgrade button to execute system upgrade.
Upgrade will take approximately 5 minutes. DVR will reboot automatically when the upgrade is completed.

Note: DO NOT remove USB Flash Memory or turn off the system during the upgrade. Removing USB Flash Memory or Turning off the system during the upgrade may cause system malfunctioning.

Remote Control ID
Enter Remote Control ID to control multiple DVRs individually. If Remote Control ID remains as 0, Remote ID does not have to be selected when using remote controller. It will work as general ID for any remote controls and a remote control will communicate with any DVRs with ID 0.

Video Type
The system automatically detects camera signal types as NTSC/PAL. But the system also offers manual selection options for different signal types.

Configuration
System settings can be saved and loaded using Configuration option
Export: Save settings to USB Flash Memory
Import: Load saved settings from USB Flash Memory
Default: Load factory default settings

Note: Configuration Import does not affect or changes system and network settings.
Network settings will also not be changed when selecting Default option.

2-1-2. MENU > SYSTEM > Date & Time

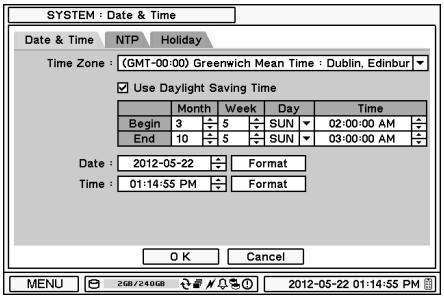

In the Date & Time, Time Zone, Date, Time, NTP Server, Holiday options can be selected.

Highlight and press Time Zone ▼ to select right Time Zone.

Select 'Use Daylight Saving Time' if it is applicable. Enter start and end date/time for local 'Daylight Saving Time'.

Press ▲▼ button to set up Date and Time. Press Format button to select a date & time display format.

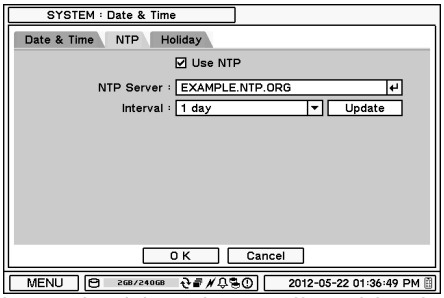

Select 'Use NTP' to enter Time Servers to be synchronized with DVR. Highlight and press ↵ to enter Time Server using the virtual keyboard. Press 'Update' to synchronize the DVR time with the registered time server.

Note: NTP is not essential for DVR operation. Any type of Standard Time Server can be used (e.g. time.windows.com). Time Synch might not be completed due to heavy traffic or delays from the Time Synch server.

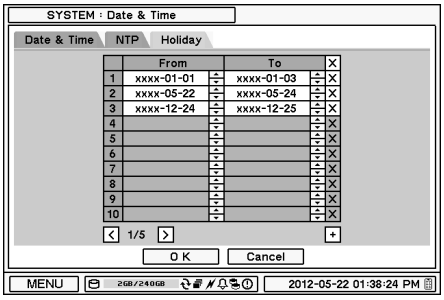

Press Holiday to set specific dates for Holiday setup. Set specific date by pressing + button. Change and delete dates using ▲▼ and X buttons.

Note: There are some Holidays fall on different days. Therefore, they have to be updated every year.

2-1-3. MENU > SYSTEM > User

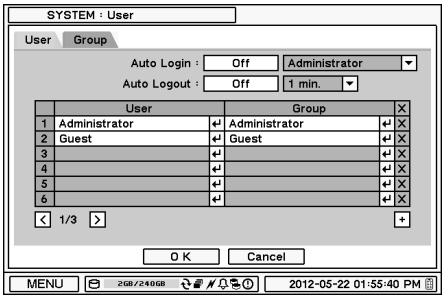

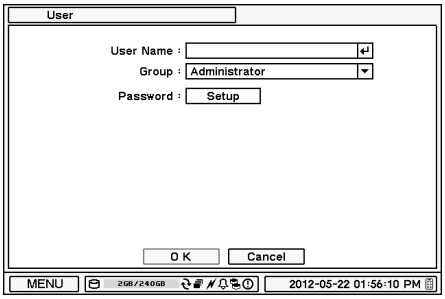

Press User Tab to enter/add a new user.

Auto Login: It allows a user to log in right after the system boots up automatically. As a system allows auto log in without the authentication process please make sure DVR has a limited access by non authorized personnel.

Auto Logout: Turn On or Off Auto Logout option.

Press [+] to add a new user. To remove an existing user, press [X] next to it.
User Name: Enter a user name
Group: Select a Group which a new user will belong to
Password: Set a new password or change a password.

Note : DO NOT have to enter Current password when setting password for the first time as there is no default password for Administrator/User.

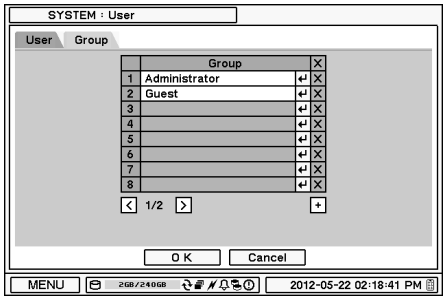

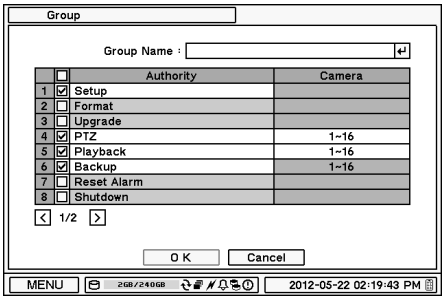

Set user registration and access rights for the system. Press Group tap to add and set group. Press [+] to add a new group. Enter a group name and select access rights for a group. To remove an existing Group, press [X] next to it.

2-1-4. MENU > SYSTEM > Quick Setup

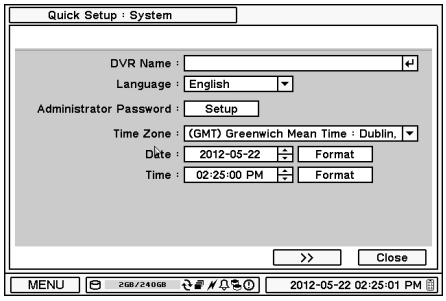

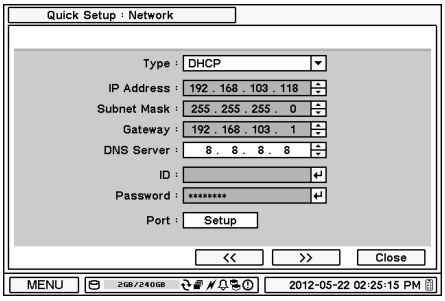
Quick Setup : Network
Type : DHCP
IP Address : 192 . 168 . 103 . 118
Subnet Mask : 255 . 255 . 255 . 0
Gateway : 192 . 168 . 103 . 1
DNS Server : 8 . 8 . 8 . 8
ID :
Password : ********
Port : Setup
<<
>>
Close
MENU
2GB/240GB
2012-05-22 02:25:15 PM

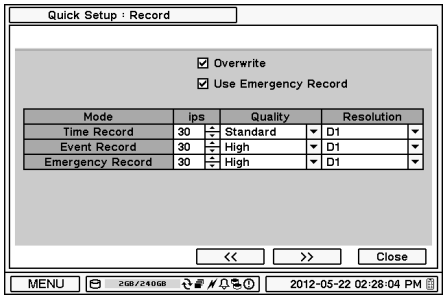

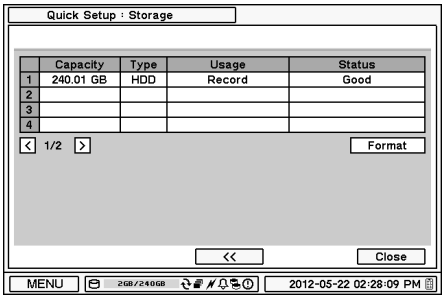

Quick Setup Menu allows easy and basic setup for main menu settings.

2-1-5. MENU > SYSTEM > System Log

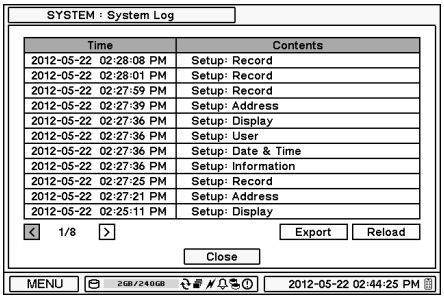

In the System Log, full list of system logs can be searched.

Press Reload button to refresh log list. USE < > button to search log list page by page.

Log list can be export in txt format.

2-2. DEVICE

Under Device menu, Device configuration options for Camera, Audio, Alarm, Keyboard and RS232 & RS485 (POS/PTZ/Keyboard) can be selected.

2-2-1. MENU > DEVICE > Camera

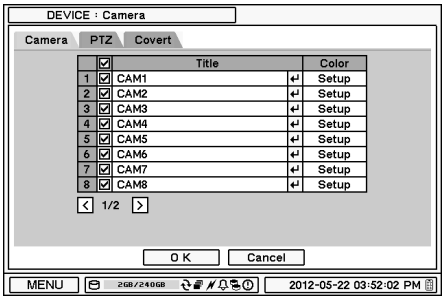

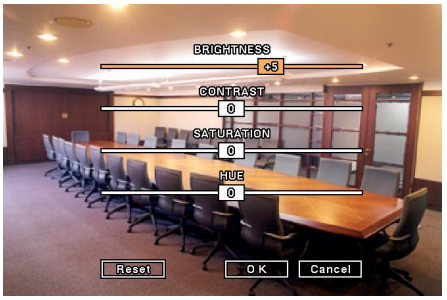

Set Camera display option. Camera display (video loss display) can be disabled by unmarking the box next to it if there is no camera connected. Press ↵ to change Camera title.

Press Setup button under Color to adjust video color. Click or drag a control box to adjust each color level.

PTZ Control

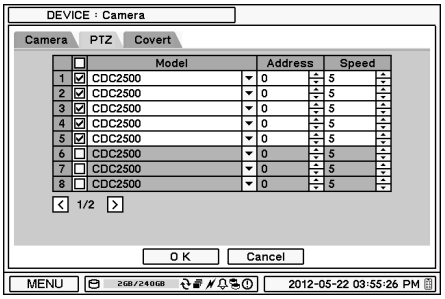

Select channel connected with PTZ camera. Select PTZ from the contextual menu appears by pressing right mouse button.

Note: PTZ can only be controlled in single screen mode.

Use icons on screen to control PTZ. By using a mouse, click arrows to move around PTZ and click icons for each functions of PTZ camera.

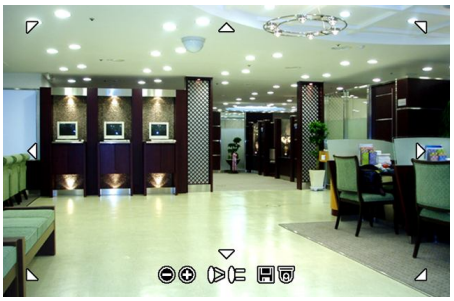

	Zoom Out
	Zoom In
	Focus on near distance
	Focus on far distance
	Save Presets
	Load Presets

Covert Setting

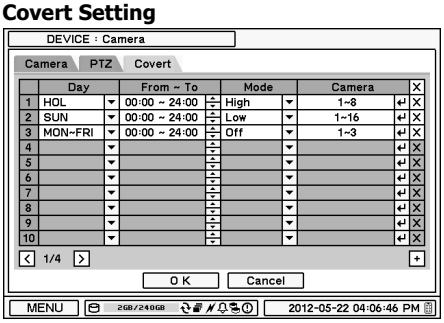

Covert setting allows the privacy on monitoring. If Covert is set, live image will not be displayed. Covert can be scheduled by day, time and mode by cameras.

Covert Low Mode: No display of video image on screen but OSD still remains on screen.
Covert High Mode: Neither of video image or OSD will be displayed on screen.

Note: Any Covert options will not affect recording data as it only changes monitoring conditions.

2-2-2. MENU > DEVICE > Audio

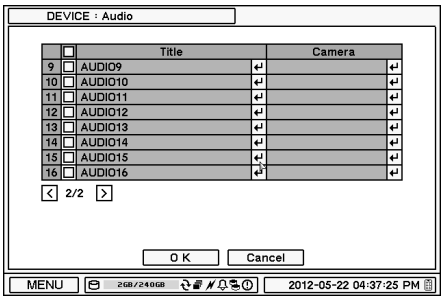

Select Audio for Audio recording. Each Camera and Audio can be linked regardless of its channel numbers.

2-2-3. MENU > DEVICE > Alarm

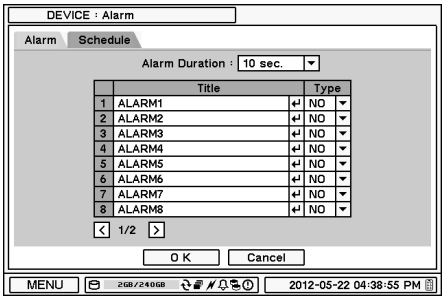

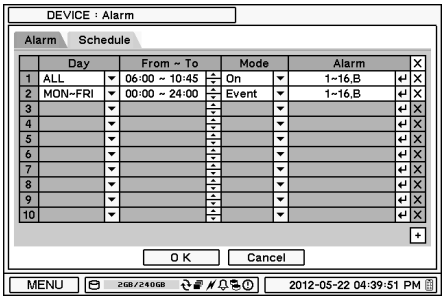

Alarm duration: Set Alarm activation time from 5 seconds to 10 minutes.
Select Schedule tap to schedule Alarm operation. Alarm can be set by day, time, mode and inputs (camera).

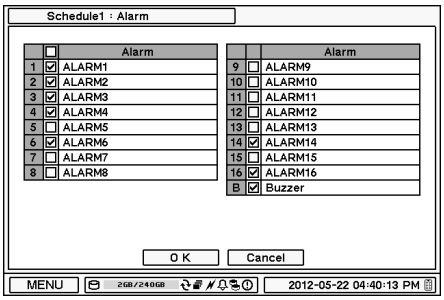

Press ↵ to choose Alarms and set Buzzer with Alarm activation.

2-2-4. MENU > DEVICE > Keyboard

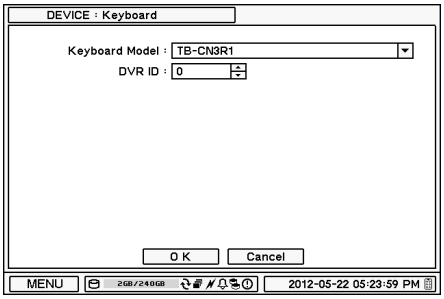

Press ▼ to find and select keyboard from the list.

2-2-5. MENU > DEVICE > RS232 & RS485

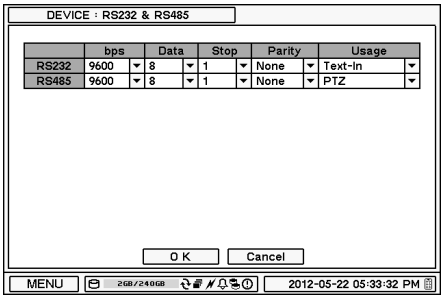

Press ▼ to select a device for each ports.
RS232: Supports Text In (POS) device. PTZ and Keyboard
RS485: Supports Text In (POS) device ,PTZ and Keyboard.

Note: Text In devices (e.g. Cash Register) needs to use ASCII code for Text In info on DVR

2-3. DISPLAY

Set Display on its menu. VGA, CVBS, HDMI, SPOT, PIP, Digital Signage modes are available.

2-3-1. MENU > DISPLAY > Display

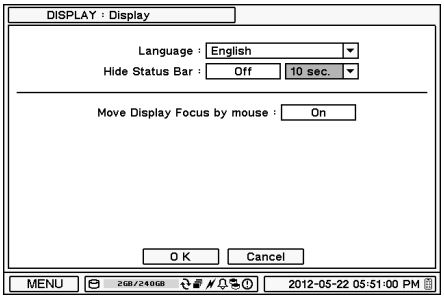

Language: Select system language. Press ▼ to find available language options.
Hide Status Bar: Select On/Off and time to hide Status Bar when system is not in use.
Move Display Focus by mouse : Enable/disable mouse control when display focus change.(only works in VGA/CVBS)

2-3-2. MENU > DISPLAY >VGA

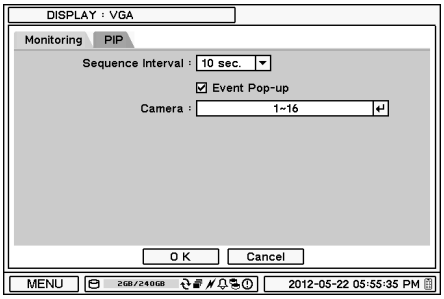

Sequence interval : Set time interval between cameras under sequence mode.
Event popup : Pops up the camera image in full screen when pre-set event occurs.

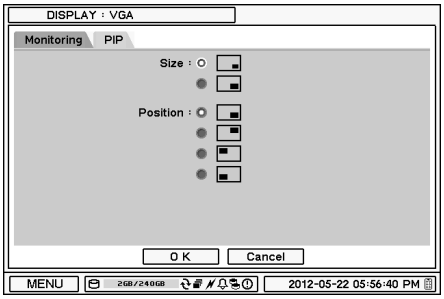

Set image size and position in PIP(Picture in Picture) mode.

2-3-3. MENU > DISPLAY >CVBS

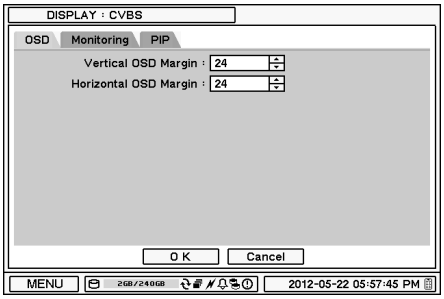

OSD Margin : Set OSD display margin on each camera.

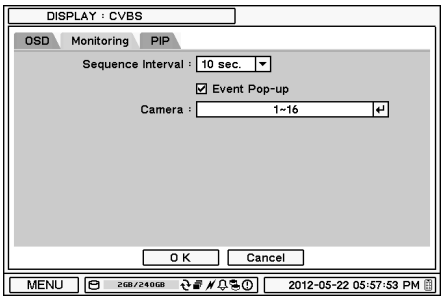

Sequence interval : Set time interval between cameras under sequence mode.
Event popup : Pops up the camera image in full screen when pre-set event occurs.

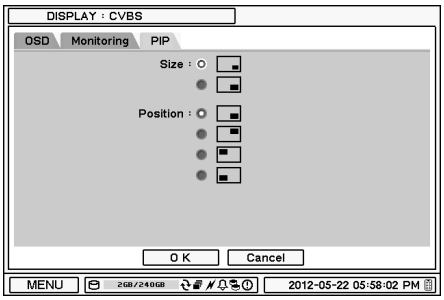

Set image size and position in PIP(Picture in Picture) mode.

2-3-4. MENU > DISPLAY >HDMI

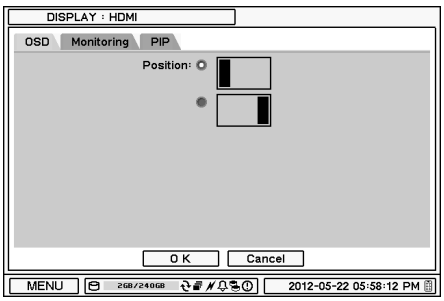

Set position of Launcher display (OSD tab)

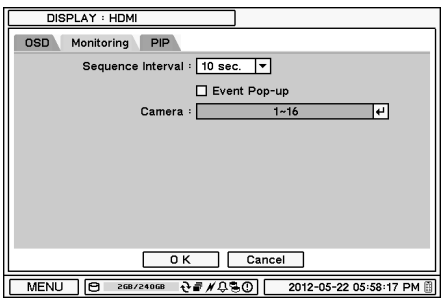

Sequence interval : Set time interval between cameras under sequence mode.
Event popup : Pops up the camera image in full screen when pre-set event occurs.

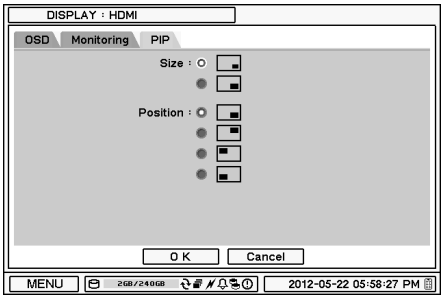

Set image size and position in PIP(Picture in Picture) mode.

2-3-5. MENU > DISPLAY >SPOT

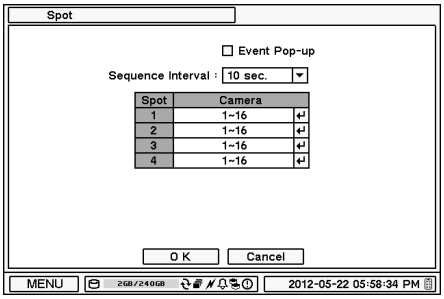

Event Pop-up: Pops up the camera image in full screen on spot monitors when pre-set event occurs.

Sequence Interval: Set time interval between cameras on spot monitors for sequencing.

Select camera display option on spot monitors. Spot outs support full and sequential camera displays. Press button to set single or multi cameras for sequential display on spot monitors.

2-4. RECORD

Under Record menu, Record configuration options for Storage, Record Archive and Utilites can be selected.

2-4-1. MENU > RECORD > Storage

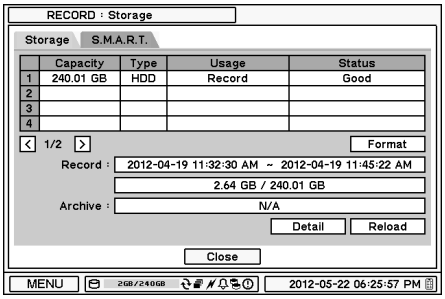

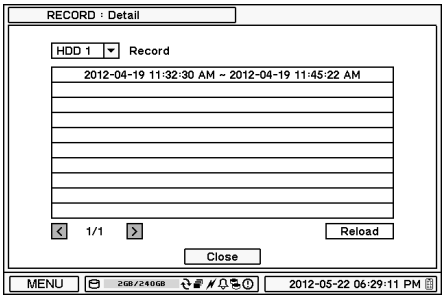

In Storage, it displays the installed/connected storage status such as Capacity, Type, Usage and Status.

Format: Press Format to format selected HDD.
Record: Displays the recording period and data stored on HDD.
Archive: Displays the Archiving period and data stored on HDD.
Detail: Displays the detail information of data stored on HDD
< 1/2 > : 1-4 displays connected SATA storage (internal). 5-8 displays storages on E-SATA connection.

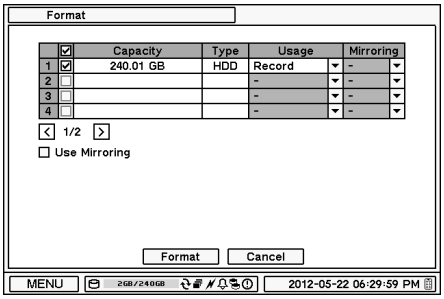

Use Mirroring: Mirroring allows recording data on two HDDs simultaneously. This will prevents unexpected lose of recording data due to HDD or system failure. 2 or 4 HDDs are required for Mirroring function. The size of Mirror HDD needs to be same or bigger than the recording HDD. Select Use Mirroring option and choose a recording HDD and Mirroring HDD. Once all the options are set, click Format to start Mirroring.

Note: Any changes or mis-installation of HDDs will stop mirroring and turn the system into recording only mode.

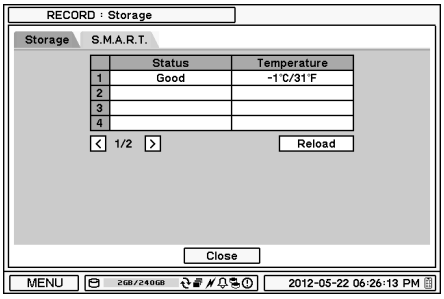

In S.M.A.R.T, HDD status are being displayed including its temeprature. Click Update to get the latest status.

Mirroring allows recording data on two HDDs simultaneously. This will prevents unexpected lose of recording data due to HDD or system failure.

2-4-2. MENU > RECORD > Record

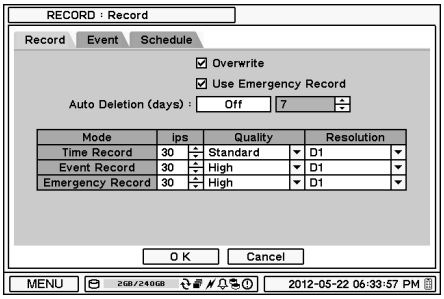

In Record, general recording options can be selected including overwrite, speed, recording quality and etc.
Overwrite: Select Overwrite to overwrite recorded HDD data when it is full.
Use Emergency Record: select emergency

Auto Deletion(days): Turn on Auto Deletion to delete any data older than the defined days automatically.
Time Record: Set ips/quality for continuous recording
Event Record: Set ips/quality for event recording
Emergency Record: Set ips/quality for emergency recording mode.

Note: The ips needs to be set higher than 1ips for Audio recording at D1 or HD1 recording option, otherwise there would be a time delay between recorded Audio and Video sync.

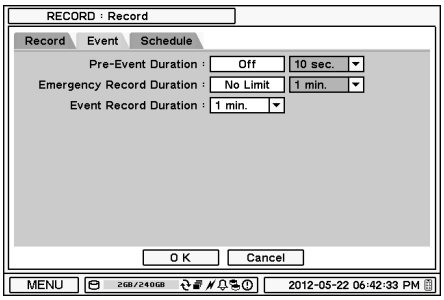

In Event, pre and post recording options for Event can be set.

Pre-Event Duration: Video Images occurred right before an Event can be recorded by setting Pre-Event under Event Mode. Duration Pre-Event recording can be set using Pre-Event(sec) upto 30 seconds.

Emergency Record Duration: Time duration can be set for Emergency recording from 5 seconds to 30 minute or continuously by selecting No Limit option.
Event REC Duration: Set recording duration for events up to 30 minutes.

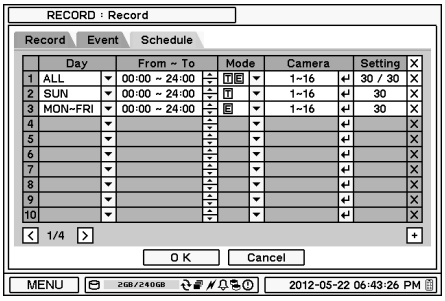

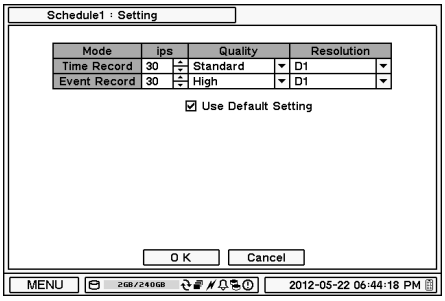

In Schedule, fully detailed and specified recording schedules can be set by day, time, modes, cameras and recording options.

Press [+] to add a new schedule. To remove an existing schedule, press [X] next to it. Press Setting to set recording options.
Use Default Setting: Check Use Default Setting to follow main recording setting under Record menu.

2-4-3. MENU > RECORD > Archive

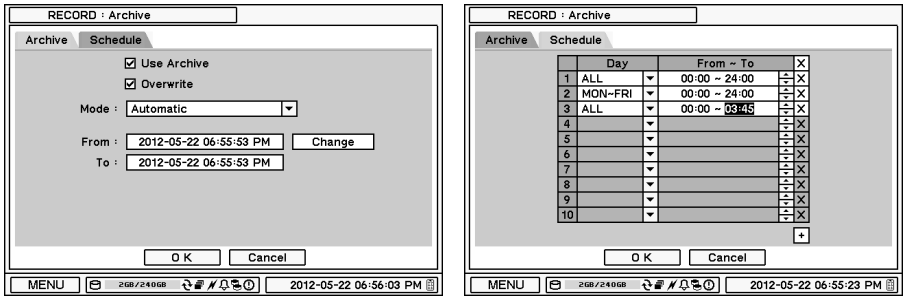

In Archive, internal schedulable Archiving option can be selected. Archiving allows auto or manual data back up from main HDD to sub HDD (e.g. From Master HDD to Slave HDD).
This will prevents unexpected lose of recording data due to HDD or system failure.

Use Archive: Select Use Archive to archive data.
Overwrite: Select Overwrite to overwrite data on the HDD being used for Archiving. If Overwrite option is unselected it will stop Archiving once the HDD is full.

Mode: Select back up mode from the list. Automatic or Manual Archiving can be selected.
Automatic: System archives data automatically. "Beginning" or "From time" can be set.
Manual: System Archives data only during defined time period.

In Schedule, specify the time schedule for Automatic Archiving job. Select a day and time for Archiving.

Note: Archiving will stop operating if any one of the HDDs is under improper operation or defective. This will be notified as 'Disk Bad' by the system. The defective HDD will not be accessed for recording, playback and archiving.

2-4-4. MENU > RECORD > Utilities

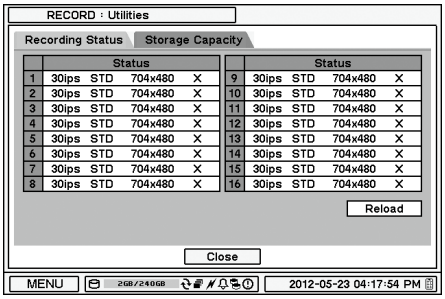

In Record Tools, estimated HDD usage and recording period can be calculated. Press Calculate once resolutions, ips, number of cameras and quality are set. The recording period is calculated based the size of HDD installed.
The GB size shows the HDD size requires for a day recording. Day and Hours shows the period can be recorded based on the installed HDD size.

Note: The calculation results show approximate data only. Same frame rate and video quality does not guarantee same storage size and recording duration. This is due to the variety of conditions on images such as more/less colors or more/less movements. This situational variance will affect the file sizes more at lower frame rate settings.

Note: Changes Ips manually. It does not change Ips according to the change of resolution.

Note: approximate size for each resolution – CIF: 360X240, Half D1: 720x240, D1: 720x480

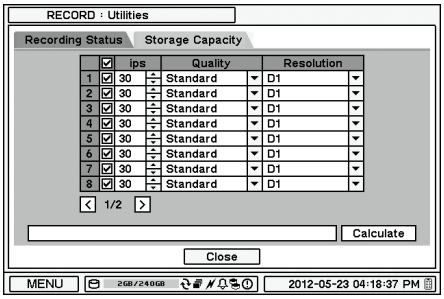

In Recording Status, current recording options and status are displayed.

2-5. NETWORK

Under Network menu, Network configuration options for network Address, DDNS, Remote Notification and Transmission can be set up.

2-5-1. MENU > NETWORK > Address

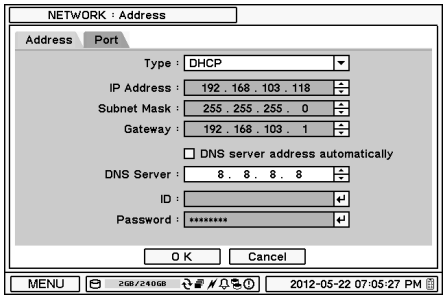
NETWORK : Address
Address
Port
Type : DHCP
IP Address : 192 . 168 . 103 . 118
Subnet Mask : 255 . 255 . 255 . 0
Gateway : 192 . 168 . 103 . 1
DNS server address automatically
DNS Server : 8 . 8 . 8 . 8
ID :
Password : ********
OK
Cancel
MENU
2012-05-22 07:05:27 PM

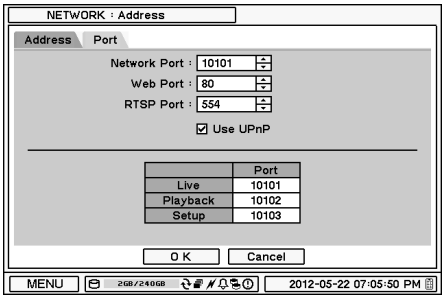

In Address, Information such as Type, IP address, Subnet Mask, Gateway Port and DNS can be set for network connections.

Type: Select the type of network configuration from: Static IP, DHCP and ADSL(with PPPoE).

IP Address: Enter IP address using button.

Subnet Mask: Enter Subnet Mask using button.

Gateway: Enter Gateway using button.

DNS: Set up the IP address of the DNS server. If you set up the DNS Server, the domain name of the DVRNS server instead of the IP address can be used during the DVRNS Server setup.

DNS server address automatically : Get connection information automatically in DHCP or PPPoE type network connection.

Select port number for remote access. RTSP port is for Android device use and iPhone port is for iPhone device.

Network port: set port for remote access.
Web port : Set port for internet explorer access
RTSP port: Set port for RTSP.
UPnP Option: By checking the UPnP option, it automatically sets ports on a connected router.

Note: Router should support UPnP option and if same ports are already being used, DVR displays a message and needs to try other ranges.

Note: ID and Password are required in ADSL(with PPPoE) type.

Note: Default TCP port is 10101 but it can be set from 1500 to 32000 if it is necessary.

2-5-2. MENU > NETWORK > DDNS

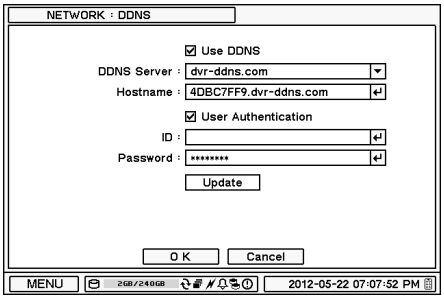

In the DDNS, network options for DDNS can be selected.
DDNS: Dynamic Domain Name Server allows dynamic network connections.

Note: "dvr-ddns.com" and "www.dyndns.org" offer free registrations for DDNS service. Please refer to the appendix for DDNS set up page.

Host Name: Name the DVR or site where it is located using the virtual keyboard by pressing ↵.
ID/Password: ID and Password are required for Authentication.

Note: Use ID/Password registered in DDNS.

2-5-3. MENU > NETWORK > Notification

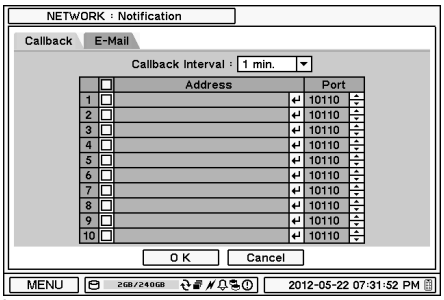

In Callback, set up IP addresses of client sites so that Events detected in local system can be notified to multi remote client sites simultaneously. Enter IP addresses of client sites to receive events notifications on remote sites. Press ↵ to pop up the virtual keyboard.

Callback Interval: Select Callback Interval to set time interval between consequential events being sent to remote site.
Note: Any events occur between the pre-set interval time will not be sent to remote site. e.g. If the interval is set as 30 seconds, only the events occur every 30 seconds since the first event will be sent to remote site.

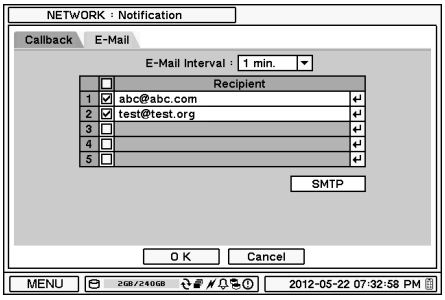

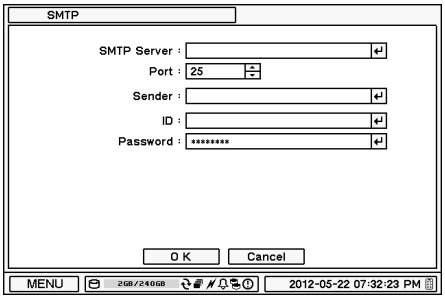

In Email, Events can be notified to personal email addresses by text message.
E-Mail Interval: Select E-Mail Interval to set time interval between consequential events being sent to remote site via email.
Recipient: Enter the email address of a recipient. Up to 5 recipients can be entered.

Note: Any events occur between the pre-set interval time will not be sent to remote site. e.g. If the interval is set as 30 seconds, only the events occur every 30 seconds since the first event will be sent to remote site via email.

SMTP Server: Enter SMTP server using the virtual keyboard. SMTP server information can be obtained from a system administrator.
Sender: Enter the address/name where the email is being sent from.

2-5-4. MENU > NETWORK > Transmission

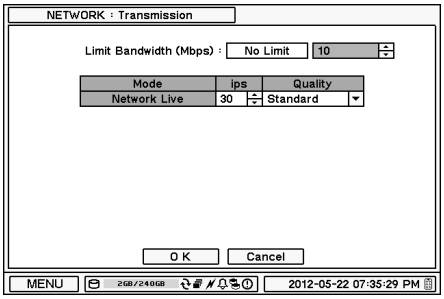

Adjust transmitted ips and bandwidth.

2-6. EVENT

Under Event menu, events can be set in synchronization with Sensor, Motion, Video Loss, Text-In, System,

2-6-1. MENU > EVENT > Sensor

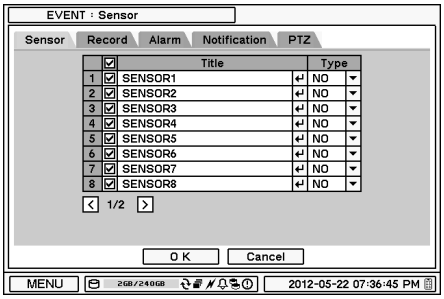

In Sensor, each sensor can be selected for activation and its type. Select Sensor Type using ▼ button.

NC: Normally Closed

NO: Normally Opened

*16th sensor reserved for emergency recording. Once this sensor triggered, DVR changes to Emergency recording mode.
(8channel uses 8th sensor.)

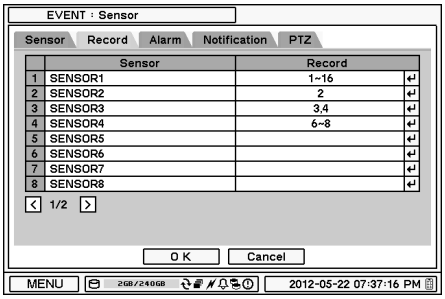

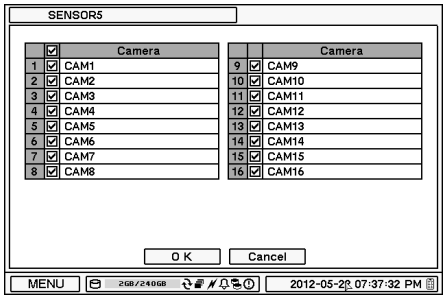

In Record, each sensor can be synchronized with single and multi cameras. Press ↵ to select cameras to be synchronized with sensors.

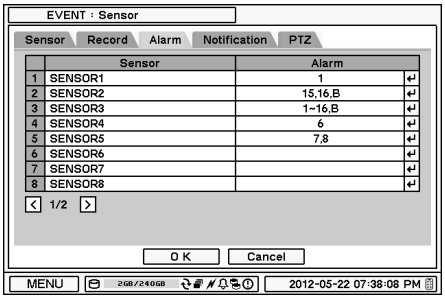

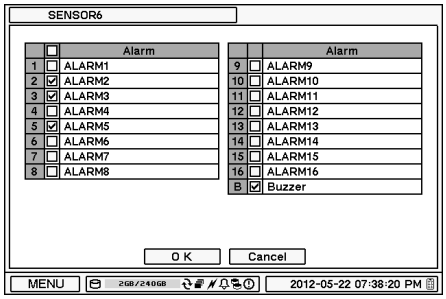

In Alarm, each sensor can be synchronized with single and multi alarms. Press ↵ to select alarms to be synchronized with sensors.

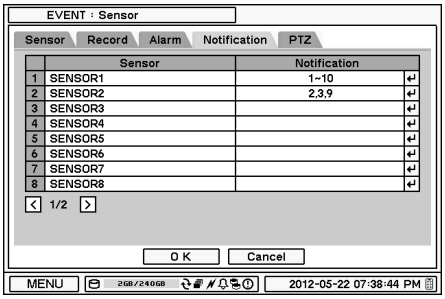

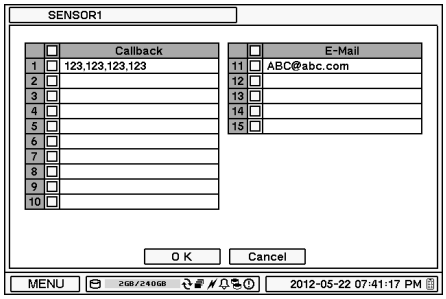

In Notification, each sensor can be synchronized with single and multi callback or emailing sites. Press ↵ to enter callback or email address to be synchronized with sensors.

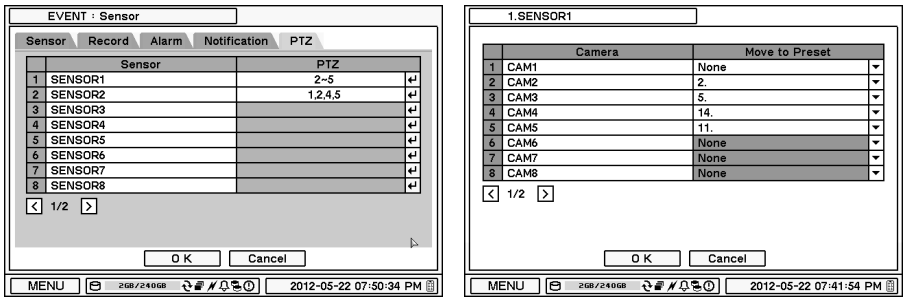

PTZ can be sync with Event using its preset function. If Event occurs, PTZ moves to the position where event and positions are pre set. The above menu shows, Sensor 1 is set to sync to cameras 2,3,4 and 5. If you click PTZ section, PTZ preset (position) can be set for cameras in the event of Sensor activation.

PTZ event related preset can be synch only with Sensor/Motion/Video Loss events. If there are multi events occur to a camera at same time, it takes events in order of Sensor > Motion > Video Loss.

2-6-2. MENU > EVENT > Motion

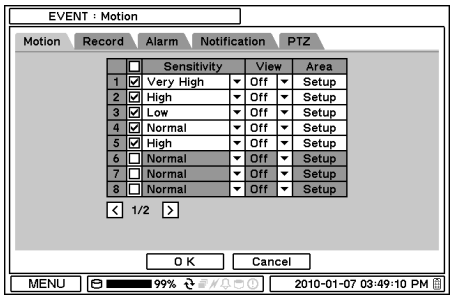

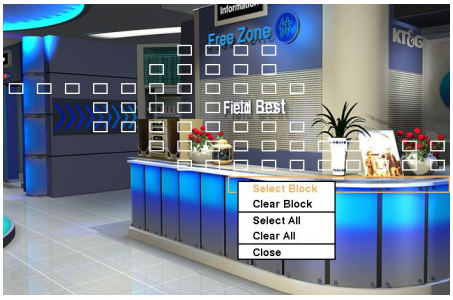

In Motion, system provides Motion Detection function. Set Motion Detection using Sensitivity, View and Area options.

Sensitivity: Select motion sensitivity from Very Low to Very High.
View: On or Off the appearance of motion zones on screen when motions is detected.
Area: Define the area for motion detection.

Press Setup under Area to define motions detection areas. The blocks indicate the area where is defined for motion detection

Select Block: Use arrow keys to move around a box. Select individual blocks to set motion zones. Use number keys to select and unselect blocks (When using a mouse, use a left button).
Clear Block: Unselect all blocks inside a box
Select All: Select blocks on entire screen.
Clear All: Unselect blocks on entire screen.

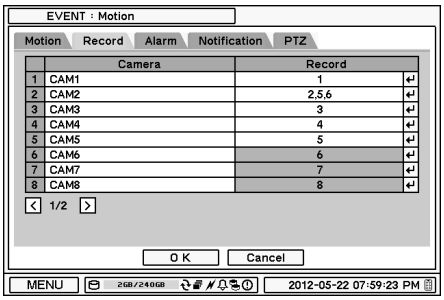

In Record, each camera can be synchronized with single and multi motion detections from other cameras. Press ↵ to select cameras to be synchronized with motions detections.

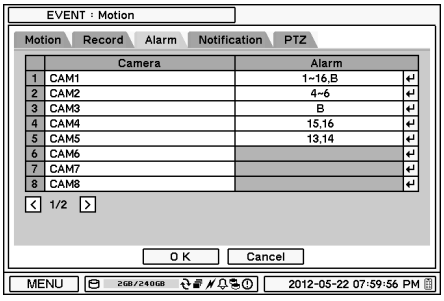

In Alarm, each camera with motion can be synchronized with single and multi alarms. Press ↵ to select alarms to be synchronized with cameras for motion events.

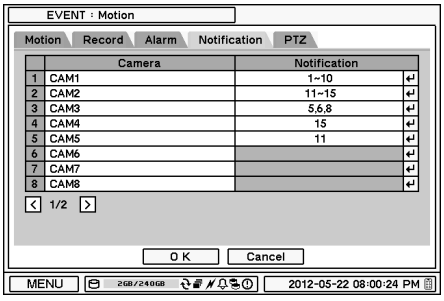

In Notification, each camera with motion can be synchronized with single and multi callback or emailing sites. Press ↵ to enter callback or email address to be synchronized with cameras for motion events.

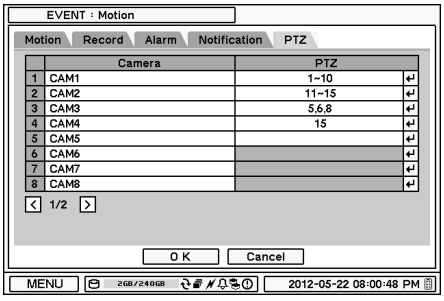

PTZ can be sync with Motion event using its preset function. If Motion is detected, PTZ moves to the position where event and positions are pre set.

2-6-3. MENU > EVENT > Video Loss

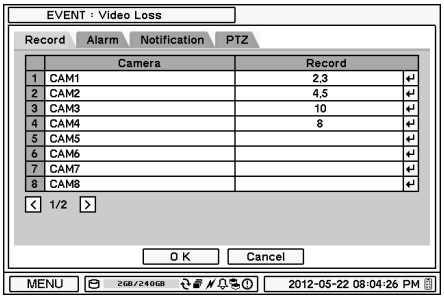

In Video Loss, single or multi cameras can be synchronized for event recording when there is a video loss. Press ↵ to select single or multi cameras to be synchronized with cameras for video loss.

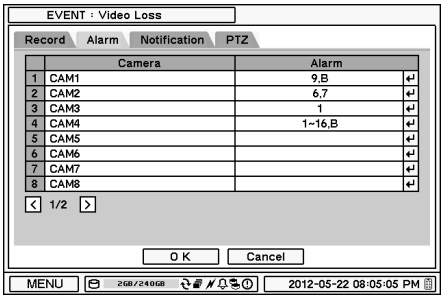

In Alarm, each camera with video loss can be synchronized with single and multi alarms. Press ↵ to select alarms to be synchronized with cameras for video loss.

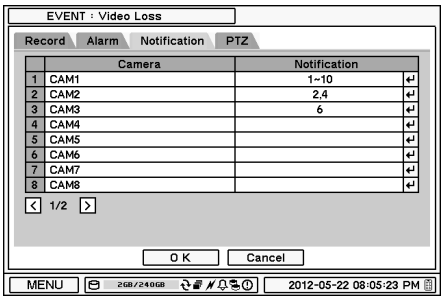

In Notification, each camera with video loss can be synchronized with single and multi callback or emailing sites. Press ↵ to enter callback or email address to be synchronized with cameras for video loss.

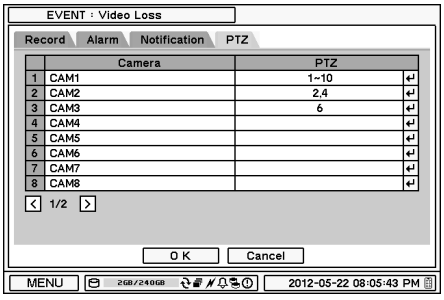

PTZ can be sync with Video Loss event using its preset function. If Video Loss occurs, PTZ moves to the position where event and positions are pre set.

2-6-4. MENU > EVENT > Text-In

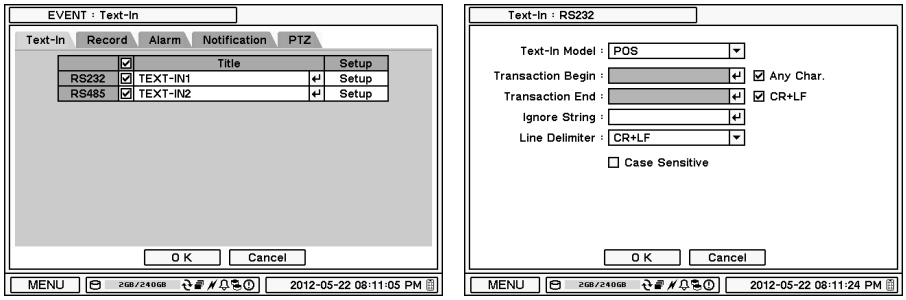

The system allows Text In from POS/ATM machines.

Note: For use of POS/ATM, the system must support general ASCII code.

Text-In Model: Select Text-In model from the list
Transaction Begin: Enter a word which the transaction info to be displayed on screen as a start.
Any Character: Check Any Character to start display a text with any character as a start.
Transaction End: Enter a word of last line where the transaction info to be displayed on screen as the end. If you want additional lines to be displayed after the transaction end, select more line options.
Ignore String: Enter a word to ignore strings includes selected word.
Line Delimiter: Enter a symbol or a word to distinguish the end of lines.
Case Sensitive: Select Case Sensitive option if distinguish a word with case sensitivity.

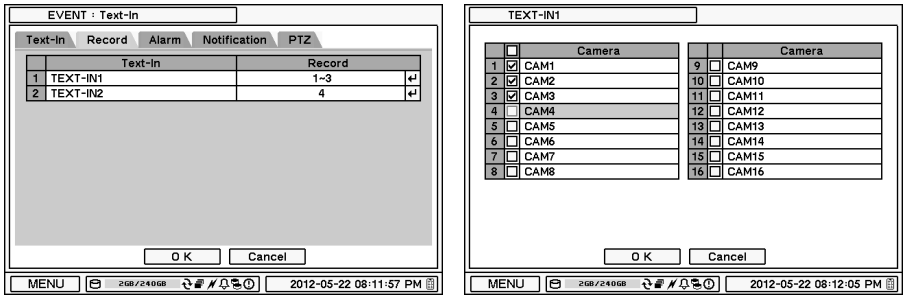

In Record, text event can be synchronized with single or multi camera record. Press ↵ to select camera(s) to be synchronized with text event. If RS232/RS485 Port are being used at the same time, it has to be used for different cameras. For example, if RS232 is set for cameras 1~12, RS485 should be set with 13~16. They can't share same cameras.

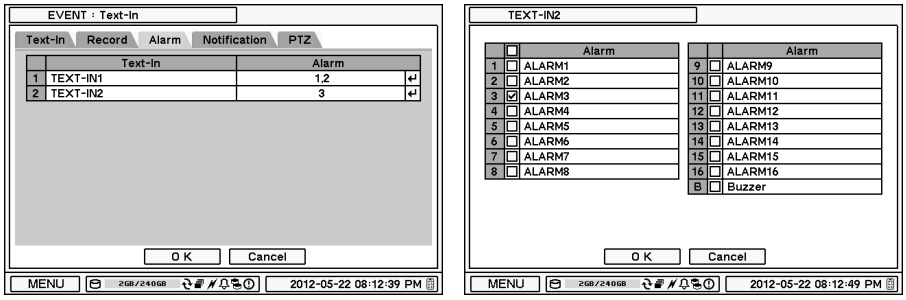

In Alarm, text event can be synchronized with single or multi alarms. Press ↵ to select alarms to be synchronized with text event. If B is selected, system will buzz on alarm detections.

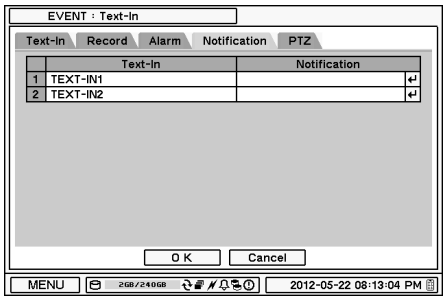

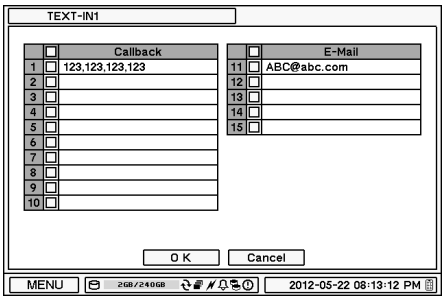

In Notification, text event can be synchronized with single and multi callback or emailing sites. Press ↵ to enter callback or email address to be synchronized with text event.

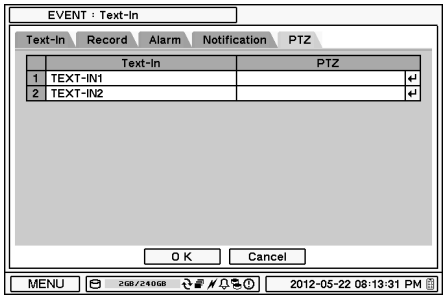

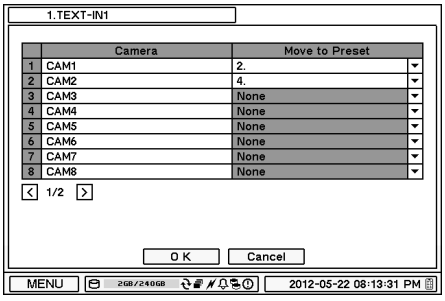

In Text In, each text input can be synchronized with single and multi cameras. Press ↵ to select cameras to be synchronized with text inputs.

2-6-5. MENU > EVENT > System

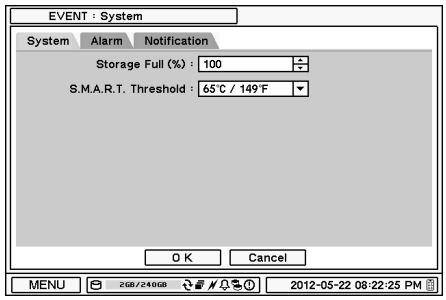

In System, S.M.A.R.T function monitors storage conditions such as Temperature, Conditions and Recording.

S.M.A.R.T Threshold allows to pre set tolerable temperature level of storage. If HDD temperature increases over pre set temperature, it will notify a user in various ways according to following settings.

Record Threshold option can be set to notify a message for the indication of HDD storage usage level. Warning message can be notified in various ways as described below.

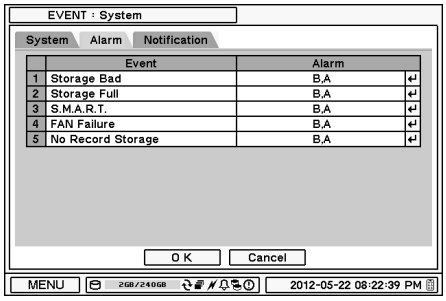

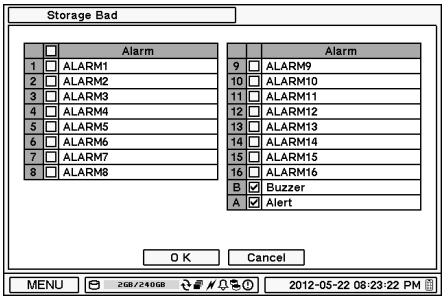

In Alarm, each system event can be synchronized with single and multi alarms. Press ↵ to select alarms to be synchronized with each event. If Alert is selected, system will pop up a warning message on screen.

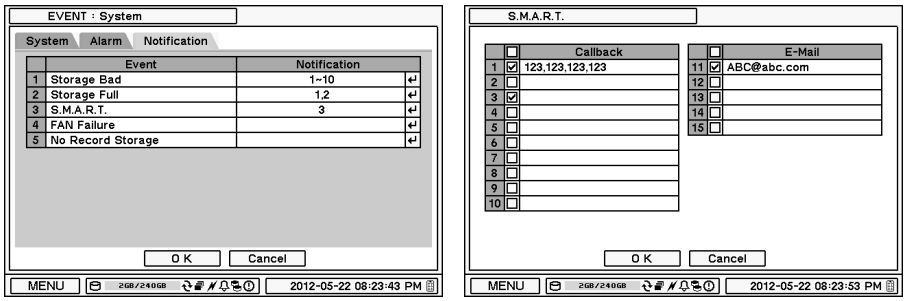

In Notification, each system events can be synchronized with single and multi callback or emailing sites. Press ↵ to enter callback or email address to be synchronized with system events.

3. Playback

The system provides various playback menu to search recorded data. Please click right Mouse button on Search Mode and select the storage type. If backup data is selected, the data on external HDD can be searched.

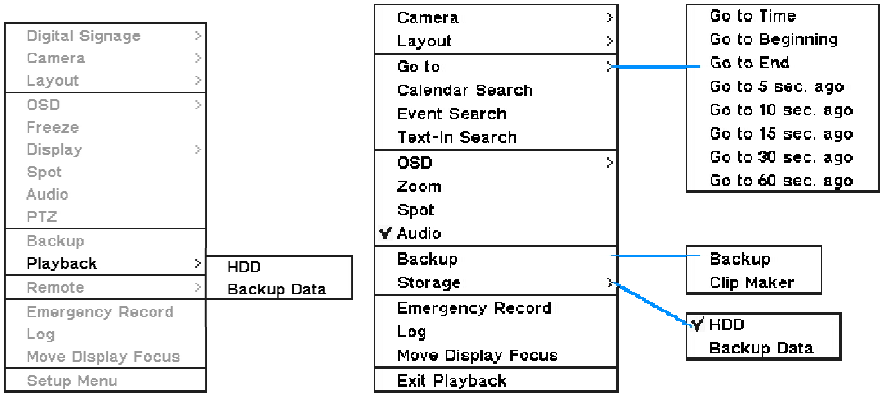

Camera: Select camera no.
Layout : Select display mode
Go to : Search recorded data by time/date. Move to the beginning or end of recorded data. Also search data by 5/10/15/30/60 seconds backward from the current time of search.
Search : Select Calendar Search, Event Search and Text In Search
OSD : Select OSD display option
Text-In Info.: Select Text display option for POS or ATM machines.
Zoom : Zoom in image by X2
Spot : Select each spot monitors' display
Audio : Select Audio outs
Backup : Select backup or Clip Copy option
Storage: Select playback storage option
Emergency Record: Start Emergency Recording
Log : Select System/Event log
Move Display Focus: Choose "Move Display Focus" to move focus to another monitor. (VGA/CVBS only)
Exit Playback: Exit Search Mode and return to Live Mode

3-1. Go to Time

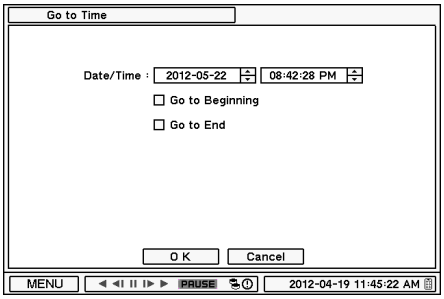

Select Go to Time to search recorded data by time/date. Set time/date using ⊟ button. Go to Beginning and End options are selectable to search the very first and last data recorded. Once desired settings are completed, press OK to begin playback.

Go to Beginning : Move to the very first recorded data.

Go to End : Move to the latest recorded data.

3-2. Calendar Search

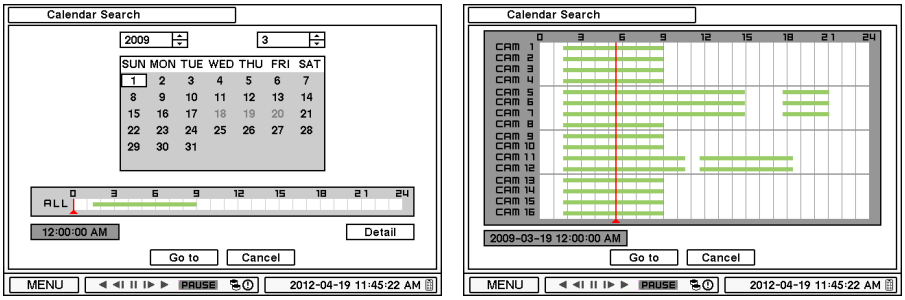

Calendar Search provides easy graphical search by displaying numbers (dates). Dates with recorded data will be highlighted. Once you select the date, it will display record time table below. The numbers on the top of the table shows the time frame in 24hours format, and titles on the left indicate cameras numbers. The color bar shows the full information of recorded data on the selected date. Move the indicator (line) to select specific recorded time of the selected date. For a detail display of recorded data please press Detail.

Once desired settings are completed, press Go To to begin playback.

3-3. Event Search

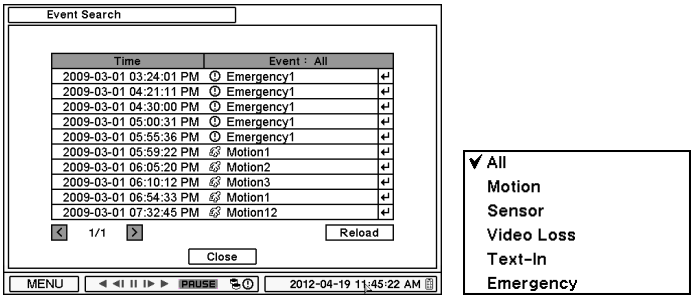

Event Search provides easy search by event list recorded. Select the date and type of event to find specific data. Press Event: All section on the tope of the list to display event search options.

All: System displays every event

Motion: System displays every events related to Motion

Sensor: System displays every events related to Sensor

Video Loss: System displays every events related to Video Loss

Text-In: System displays every events related to Text In

Emergency: System displays every events related to Emergency Recording

Once find specific list of event, move up and down button to highlight the log and press it to playback the event data.

3-4. Text-In Search

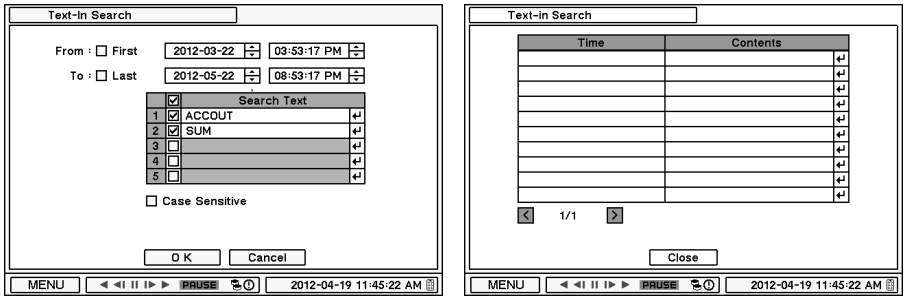

Text In Search provides easy search by transactions. Search for Time and Transaction information. Press Search for detail information.

Text In Model: Select a model type for Text In
From: Set beginning time to start search or select First for search from the first data.
To: Set end time to end search or select Last for search to the last data.
Search Text: Enter any words to search text data include the words.

Once entering all the search information, press OK to start Text In search.

3-5. Backup Data Playback

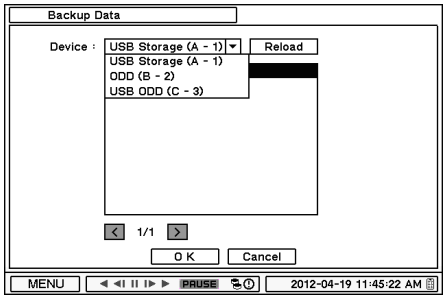

Backup files on backup medias can be played on DVR. Insert the media with backup files and select a file to playback it on DVR.

3-6. Playback Control

R.Play: Reverse Playback
Step Backward: Go to the previous image
Pause: Freeze or Stop current image
Step Forward: Go to the next image
Play: Play the data at normal speed

To control the backward and forward playback speed, press on ◀ or ▶ repeatedly. Playback speed can increase up to x32.

4. Backup

Recorded data can be backed up on USB Flash memory. Select backup or Clip Copy option during Search or Live mode by selecting Backup.

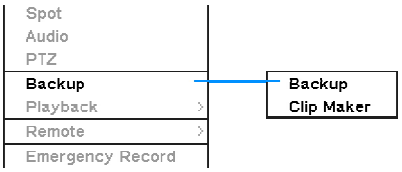

4-1. Backup

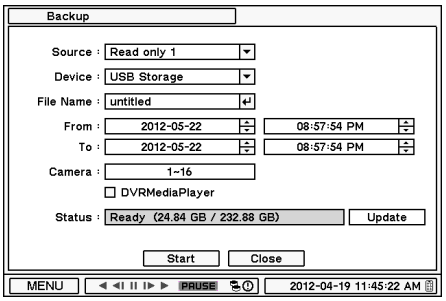

In the BACKUP, the recorded data can be selected for backup to USB devices.
Press USB Device ▼ to select the type of USB Device connected to the system.
Select date & time period of data to be backup using ▲▼ button.
Select Camera number to be backup or All to backup all the data recorded during the selected period.
Status shows capacity of the device being prepared for backup, and it will show backup progress during backup.

The files saved (backup) in DVRMediaPlayer (.exe) format allows multi camera backup and the files would not require any specific codec for playback on PC. To open and play a file saved in DVRMediaPlayer (.exe), double click the file and it will automatically be played on Internet Explore window. This fuction is supported only on Internet Explorer 7.0 or above.
Note: The backup process could be slowdown if the system is being monitored/playback on the remote using the client program during the backup process.

Note: "DO NOT remove the back up media while the data backup is being processed. It may cause critical damage to either the media or system if the backup media is removed during the backup process."

Note: During the CD or DVD back up the ODD door could be opened and closed as a process of back up. Please do not remove CD or DVD during the back up in any cases until it is done completely.

4-2. Instant Backup

Press backup button to start Instant Backup during the playback. Instant Backup window will appear when press backup button during the normal playback mode. Select Device, File Name, Audio and press Start to continue the playback and backup. The Backup Icon will appear on the screen during the Instant Playback. Press backup button one more time to stop and complete Instant Backup.

Note: "DO NOT remove the back up media while the data backup is being processed. It may cause critical damage to either the media or system if the backup media is removed during the backup process."

Note: Playback speed will be slower than usual while instant back up is processing.

4-3. Clip Maker

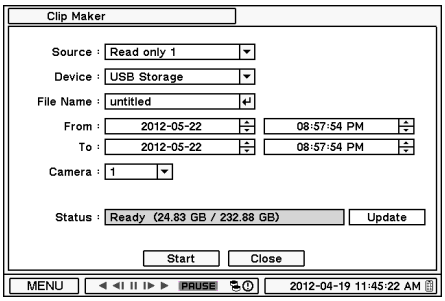

Clip Maker allows to create single channel backup file which can be played on PC. Select Clip Maker option on the pop up menu during the live or pause mode on the playback.

Select the backup option for Clip Maker. Press [Start] button to create Clip Maker. Use Quick Time player to play the file created using Clip Maker

Note: The Clip Maker file can not be played on other programs such as Window Media Player.

Chapter 4. Remote Software NEMON

1. Using NEMON

1-1. Starting the Software

Double click on 'Nemon2' icon on PC to run the software.
Main screen of the remote software appears as shown below.

Note: A minimum resolution should be more than 1024 x 620; and a recommendable one is over 1280 x 1024.

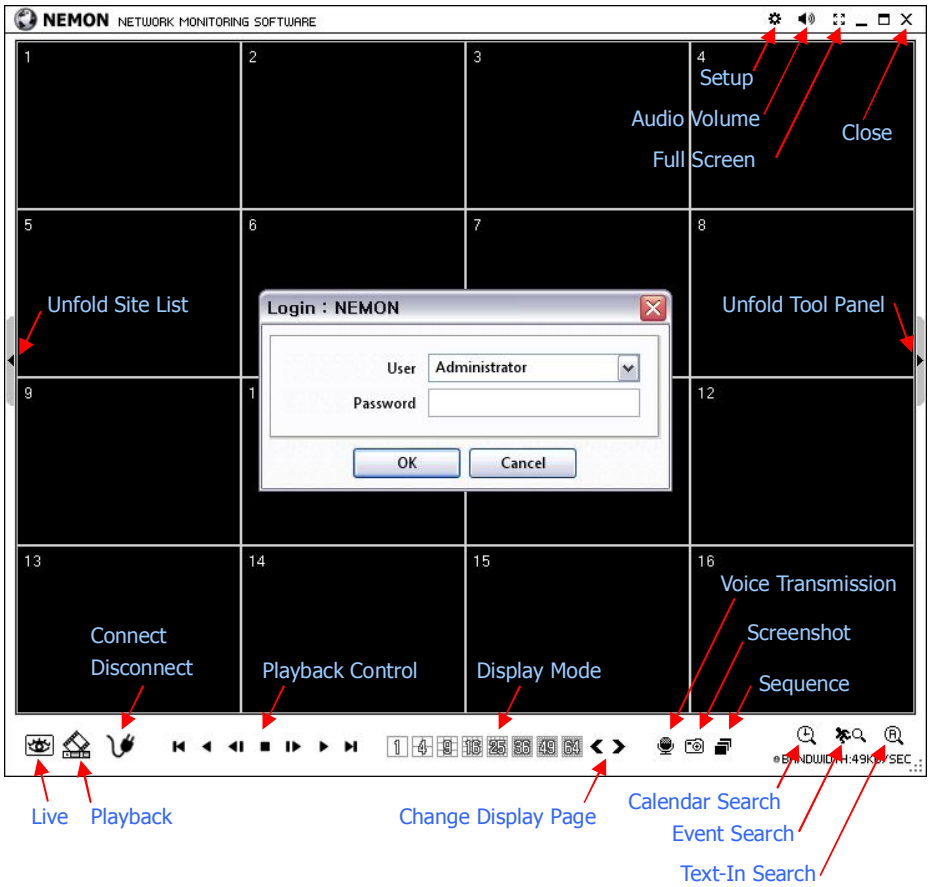

The Log In window will appear when Nemon program starts. Select user level as each user will have different authority level over the system control depend on the pre set up. Enter OK once the user level is selected as the default password is 'none'.

Live: Click the image to enter the live mode.
Playback: Click the image to enter the playback mode.
Connect / Disconnect: Click button to connect a site as live or playback mode.

Playback Control: Use buttons to control playback images. (Stop, Move by Image, Play, Rewind/Forward, and Move to First/End)

Display Mode: Select display modes. (single screen, 4, 9, 16, 25, 36, 49, 64 and full screen)

Change Display Page: Change Display Mode to Previous or Next page in camera order.

Voice Transmission: Click button to transmit remote voice to the local DVR.
Screenshot: Capture the current screen and save it as a image file.
Sequence: Display images on pre selected sites in sequence mode.

Setup: To change set up on Nemon S/W or a remote DVR.
Audio Volume: Click Audio icon to select audio volume and mute options.
Select a camera to receive Audio of the selected camera (highlighted in border lines).
Full Screen: Display image on full screen mode.
Close: Click the icon to close the software

The below options are only selectable under playback mode.

Calendar Search: Search data on a graphic calendar and time table.
Event Search: Search data using recorded event logs.
Text-In Search: Search data using recorded Text-In data from POS/ATM device.

Backup: Shows backup options as below:
- Save as MP4: Save the recorded data in MP4 file format.
- Backup: Backup the recorded data.

Storage: Select a storage type installed in the connected DVR. Either recording HDD or Archiving HDD can be selected for playback.

1-2. Site Set Up

Click [Connect] button to display registered remote locations or add new locations.

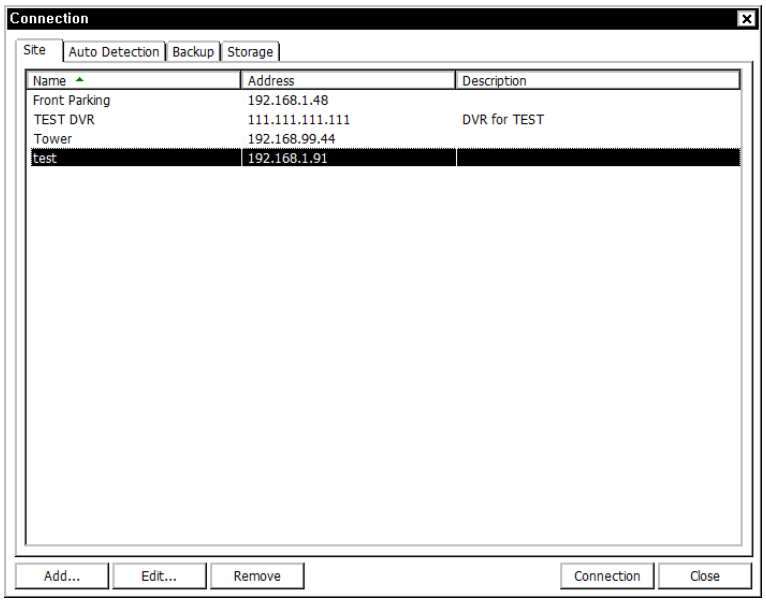

Click [Add] button to add remote location and required information.

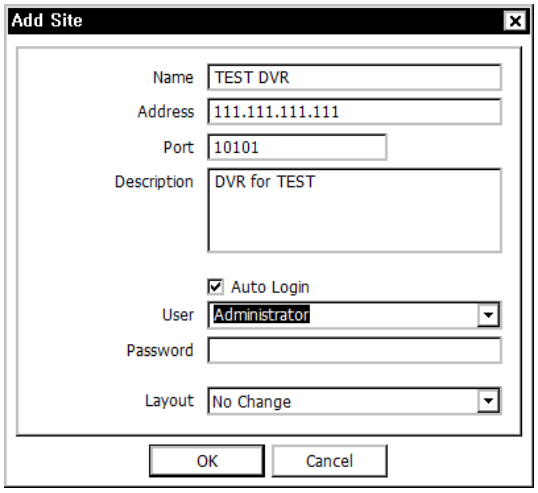

Name: Enter Site Name
Address: Enter IP address or domain name of the site
Port: Enter port number if there is a specific port to be set for the software
Description: Enter the description of the site
Auto Login: If do not want the Log In window to be popped up every time starting the remote S/W, check Auto Login to skip User/Password authentication process
User: Select the type of user from the list
Password: Enter the password of DVR
Layout: Select desired display layout for the site when it is connected

Note: Layout can be changed after begin connected using the display option on the menu.
Click [OK] to save information and complete the registration. Double click the location or Highlight it and click [Connection] button to get connected to the site.

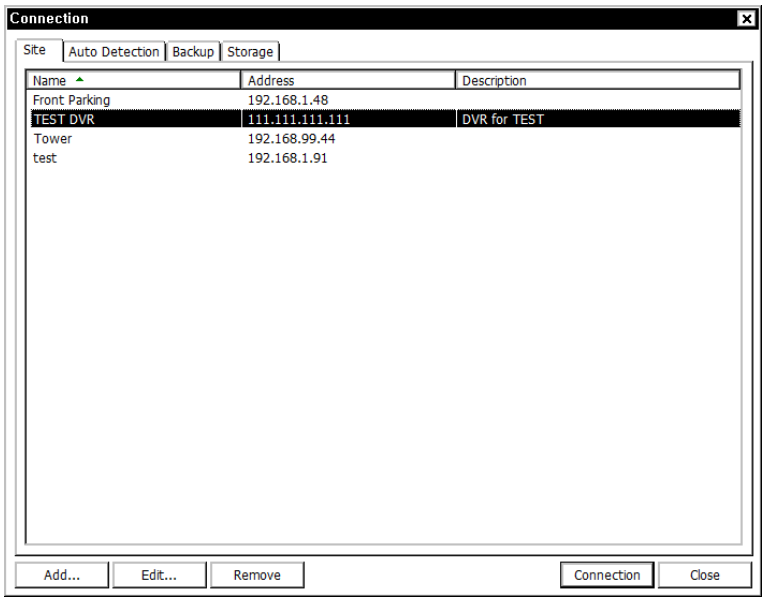

The DVR and Client program on PC start searching each other once they are on the same local network. The Auto Detecttion menu shows the DVRS detected on the same local network.

Note: This function is only available on local networks. No settings are required if both DVR and PC use DHCP. But if the Static IPs are used, DVR and PC need to have same subnet info and with different static IP addresses.

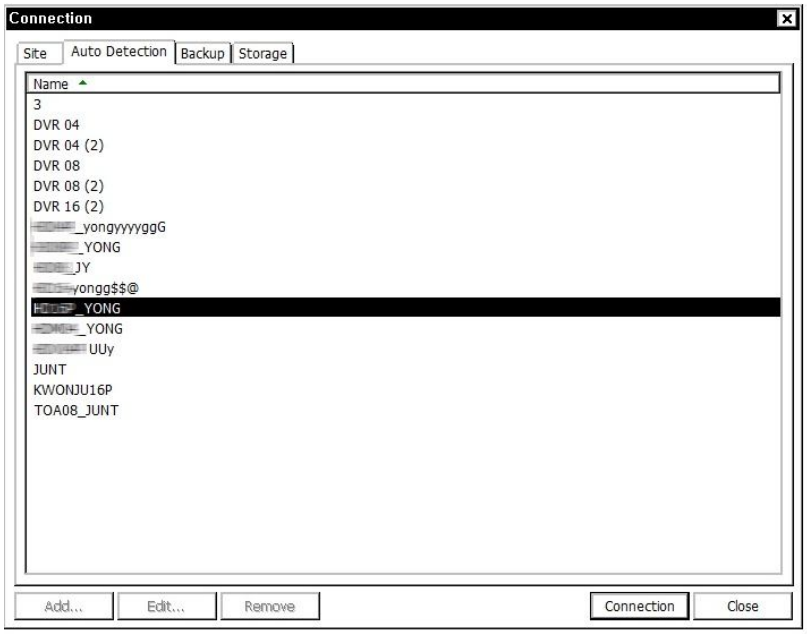

Note: Auto Detecttion finds DVRs on the local network automatically. To use this function, Apple® Bonjour® needs to be installed in PC. Please refer to http://www.apple.com/bonjour for more details and download.

1-3. Favorite Set Up

Favorite function allows multi site management. Up to 64 different cameras and sites can be monitored and managed on one screen. Select [Favorite] tap.

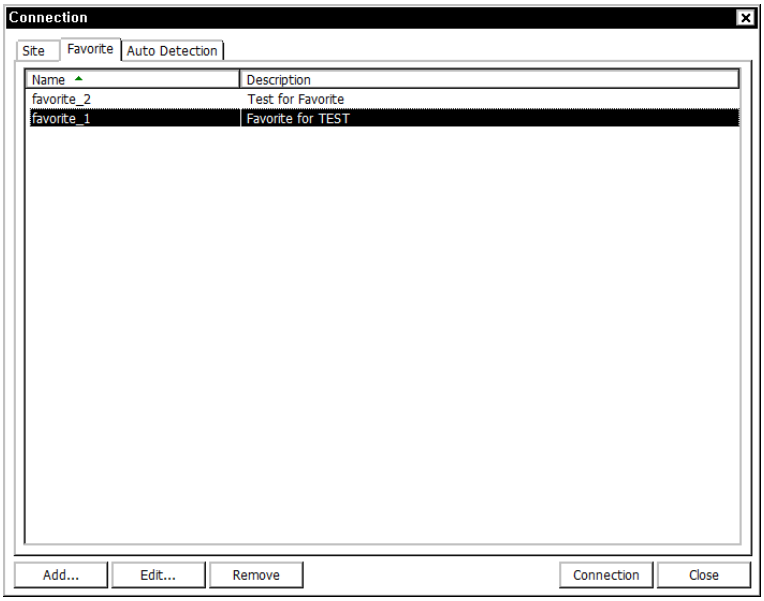

Click [Add] button to group multiple sties as one favorite group.

Enter the group name and description. Up to 64 different cameras or sites can be grouped and displayed together. Select sites and cameras from the drop down list by clicking ▼ button.

Note: Sites should be registered under 'Site' menu before setting the favorite.

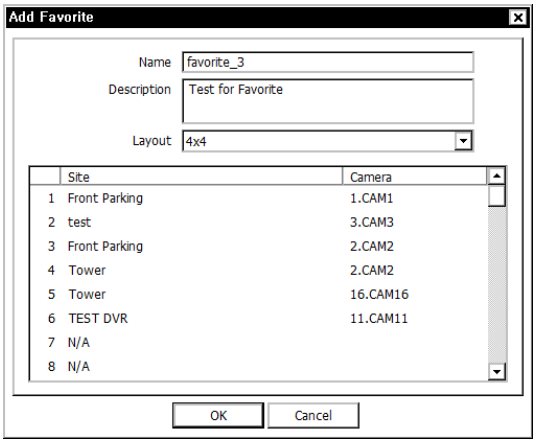

1-4. Site List Panel

The remote sites also can be registered on Site List Panel. Use ADD , EDIT , REMOVE buttons on the bottom to register and managed the remote sites and favorite sites.

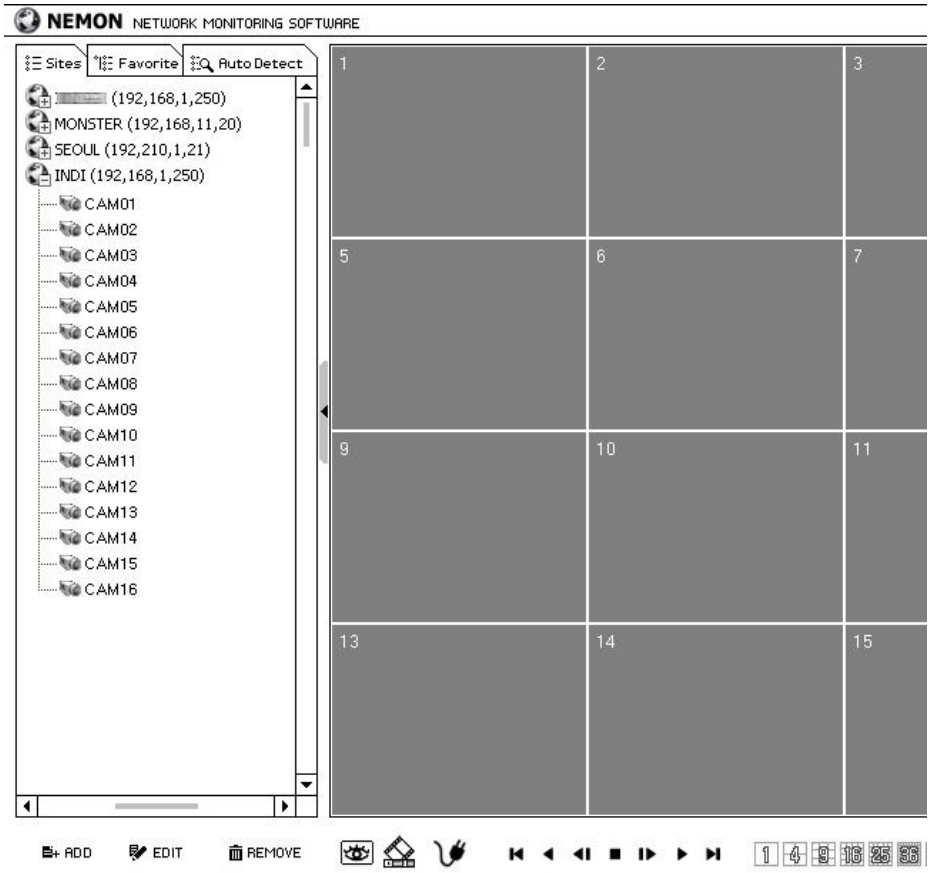

Drag and Drop the listed sites on to the display section to connect the sites. Each camera can be dragged and dropped to arrange independent displays. This allows making a display by a group of cameras from the different sites.

Once the group of cameras from the different sites has been set, move Favorite tap to save this new setting as a new Favorite site.

Note: Each camera can be dragged and dropped onto displays only in Sites. (not Favorites and Auto Detection)
Note: Camera positions (CH locations) can be exchanged or move around by Drag & Drop.

1-5. Tool Panel

1-5-1. DVR Status

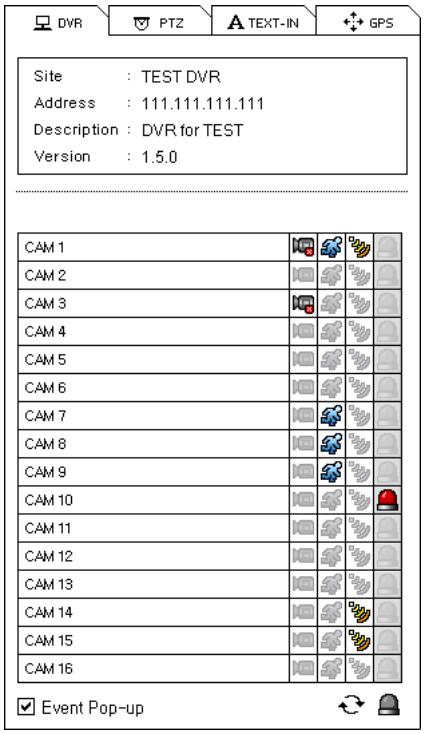

DVR tap shows Video Loss, Motion Detection, Sensor Detection status of currently connected remote site. User can activate a remote alarm on DVR Status options.

Reload: Refresh the latest DVR status info.

Reset Alarms: Turn off activated Alarms on the DVR.

Event Pop-up: Set event pop up option. A camera will be displayed in full screen mode in case of event. Set Pop up duration at Setup > System > Event Pop-up Duration.

Note: Event Pop-up will not be activated even it is checked when DVR status menu is hidden or other menu options (e.g. PTZ control) are being used.

1-5-2. PTZ

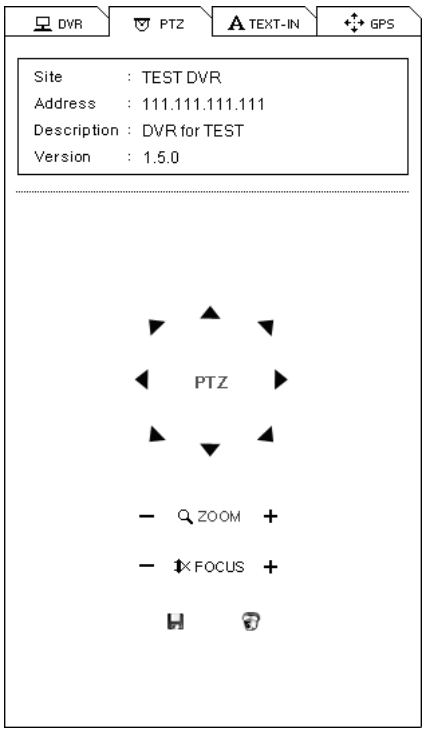

The second tap of Tool Panel is PTZ controller. Once DVR is connected in Live mode and select the PTZ view CH, it will display the site info and activate the PTZ controllers.

Set Preset: Save PTZ camera's current location. Up to 16 Presets can be saved

Move to Preset: Move PTZ cam based on the preset settings.

1-5-3. TEXT-IN

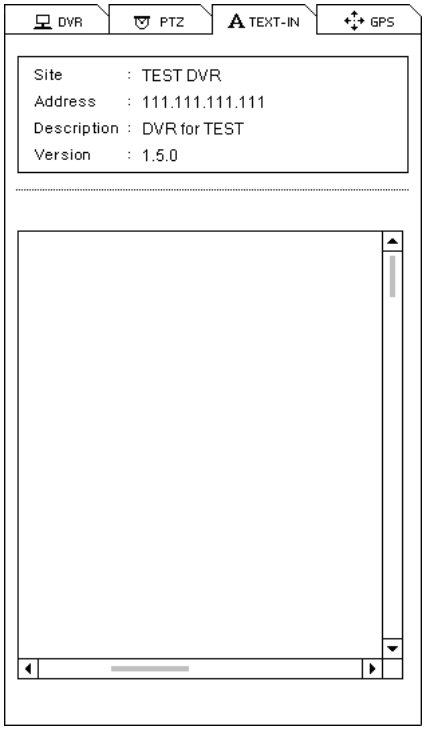

Displays recorded TEXT-IN info. TEXT-IN tap is activated under playback mode only.

1-5-4. GPS

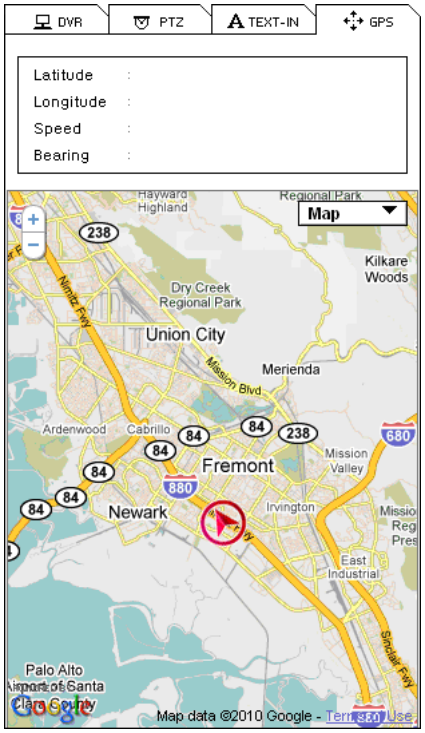

GPS is for Mobile DVR tracking under playback mode. GPS data is recorded with images using built in GPS on Mobile DVR. This data will be displayed on Google Map under playback mode.

Note: the GPS function isn't used for this DVR

2. Remote Playback

2-1. Calendar Search

Calendar Search Panel appears when a site is connected under playback mode as shown below. Time bar will appear once the date is selected and the image preview will appear when the specific time is selected on the time bar.

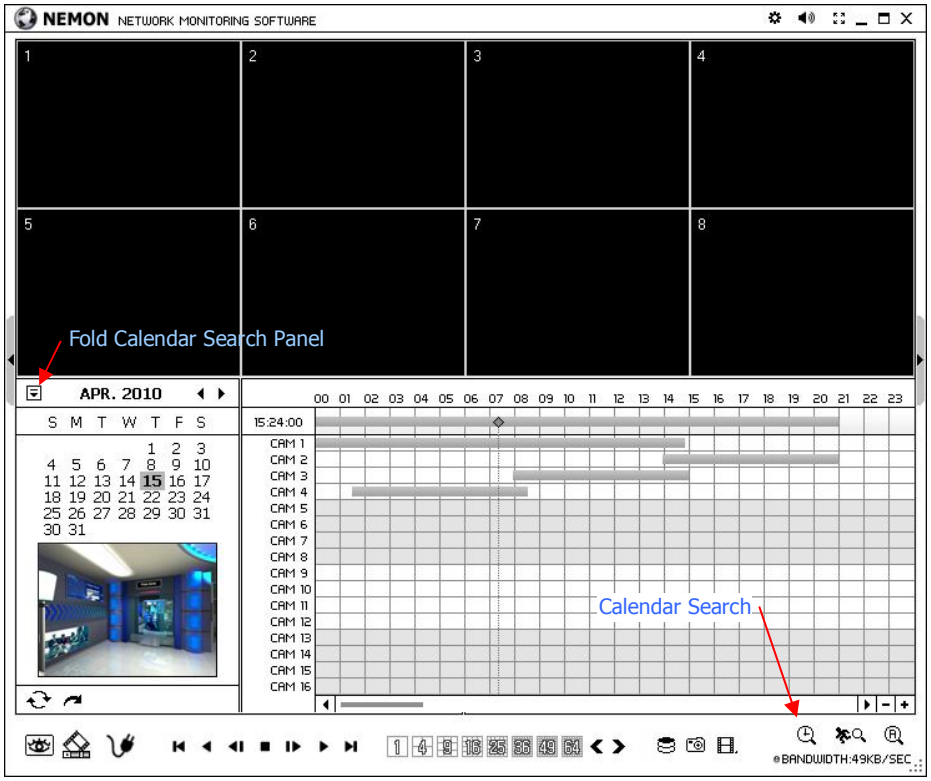

Use below buttons to control the playback image.

Playback Control Button

- Beginning
- Reverse Play / Rewind
- Step Backward
- Stop
- Step Forward
- Play / Fast Forward
- End

Go To Time

• Click on icon to display time search window. Enter specific time to search the data

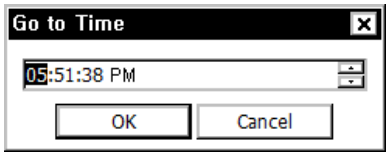

• Click on icon refresh and update the calendar info.

2-2. Event Search

Select Event Search on the bottom of the screen to open Event Search Panel. Enter Date, Event Type and etc and select SEARCH button to retrieve the search results.

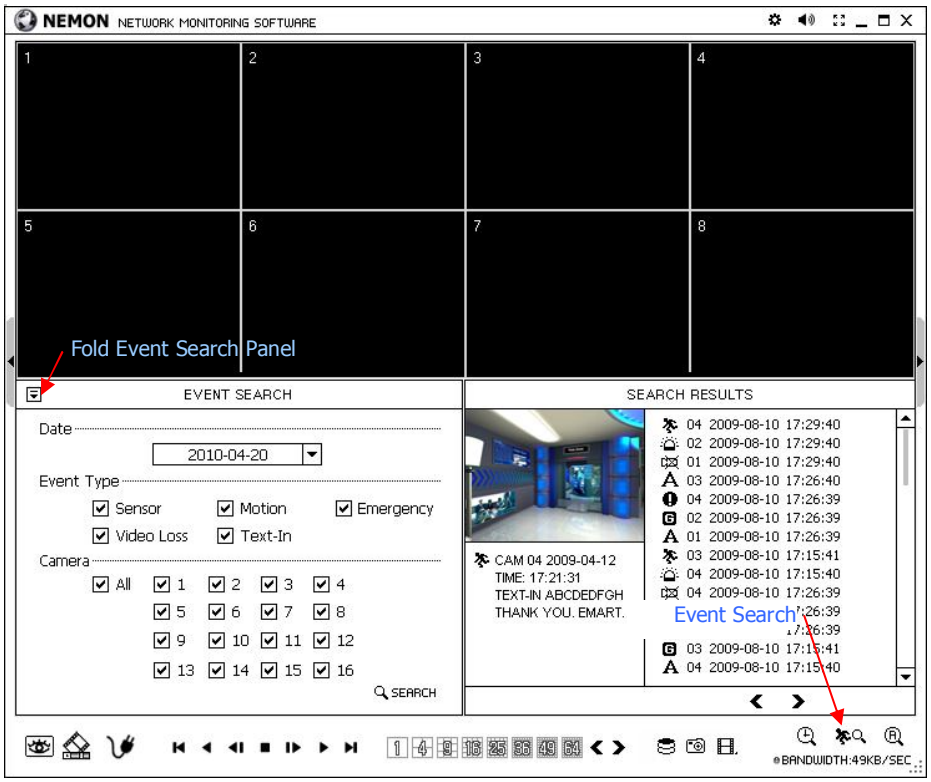

Select an event from the list for playback. Search trough the list using < > buttons.

Select the date of event search for from the Date list. Select All or specific camera numbers for related event search. Type of events can be selected from the list for detail and effective search.

2-3. Text-In Search

Select Text-In Search on the bottom of the screen to open TEXT-IN Search Panel. Enter Date and Text and select SEARCH button to retrieve the search results.

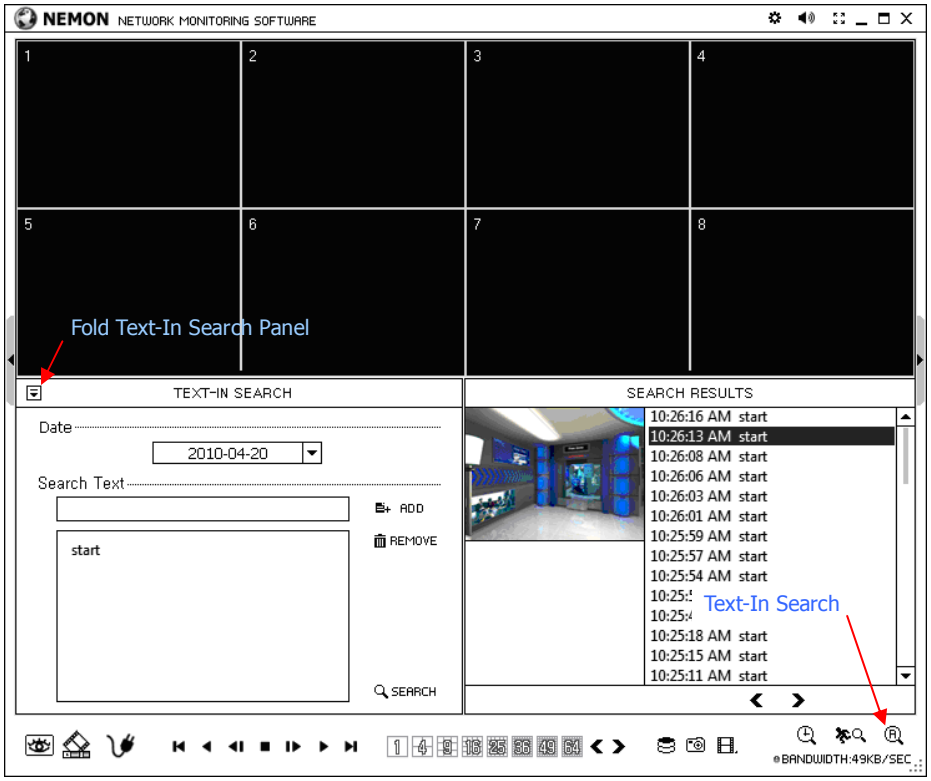

Select an text-in event from the list for playback. Search trough the list using < > buttons.

2-4. Saving the recorded data

Screenshot

Select button to capture the current image during the playback as show below. Select Save... button to save the image. The Image can be saved in JPEG, BMP and PNG format.

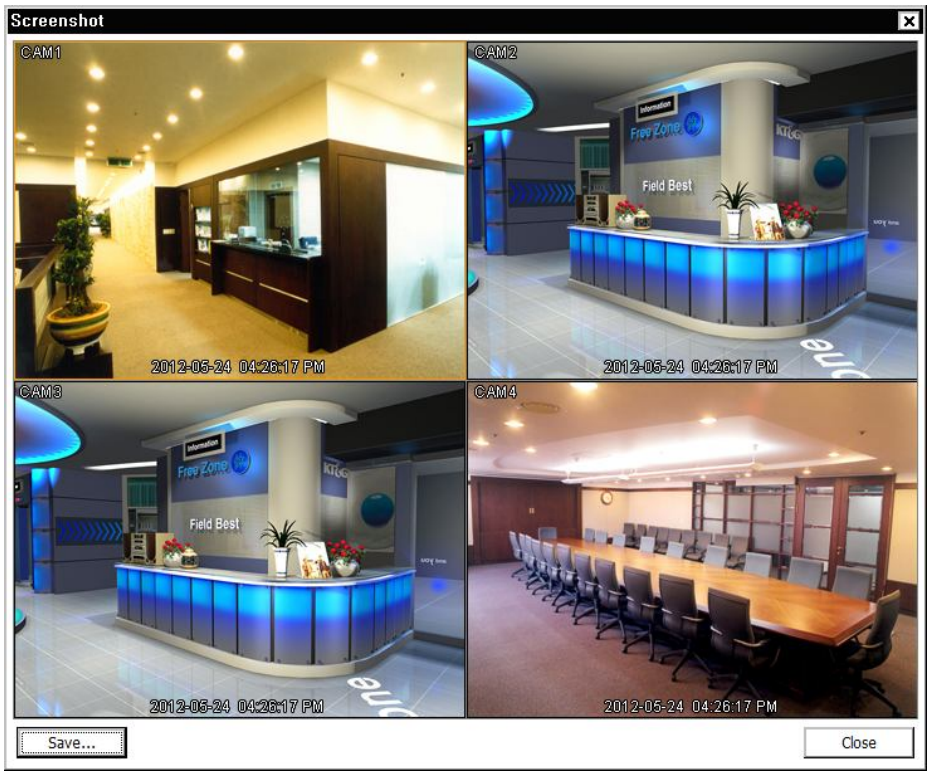

Save as MP4

Select button during the playback and select "Save as MP4" to open the window as shown below to save data in MP4 format.

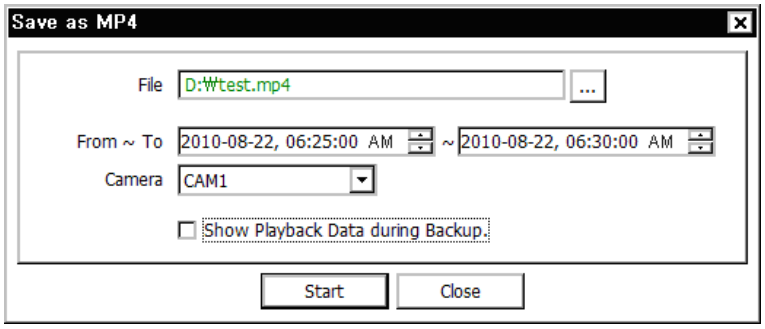

- Enter file name and select Location.
- Select the time period.
- Select Camera number. Press Start to create MP4 file.

Backup

Select 🎞 button during the playback and select "Backup" to open the window as shown below to save data in own video format.

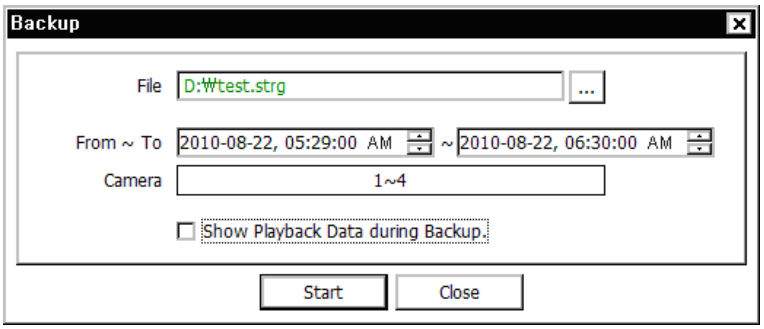

- Enter file name and select Location.
- Select the time period.
- Select Camera number. Press Start to create Backup file.

2-5. Play Backup Data

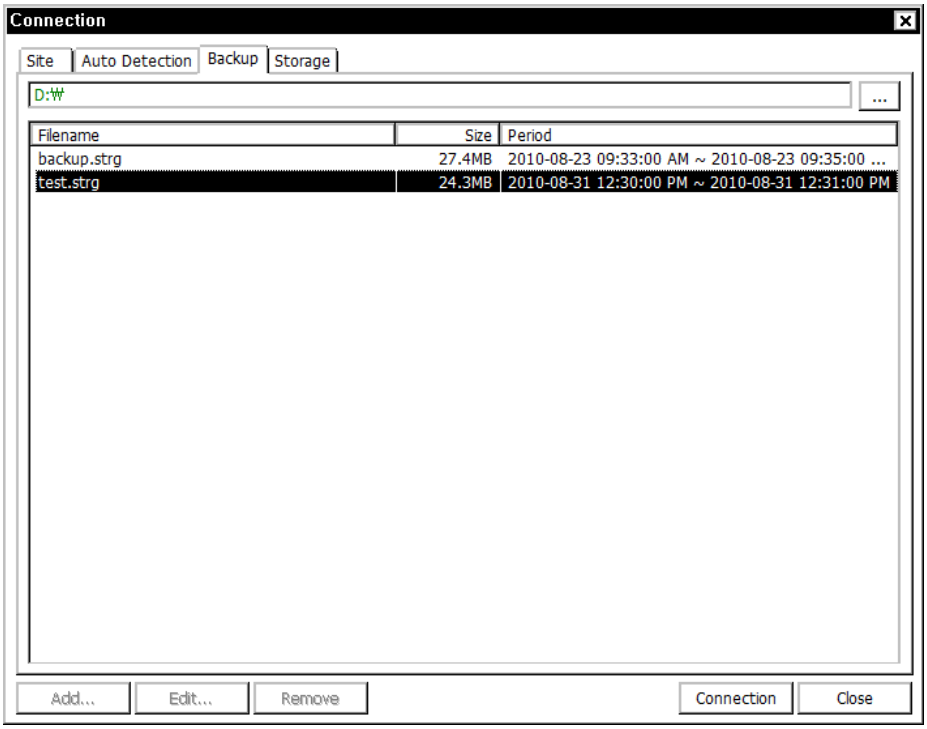

Backed up data from the local site can be played on the Nemon software.

Select 🔌 button during the playback and above window will appear. Select the location where the data is saved. Select the file and click Connection to play the video.

Note: Recorded Audio can be played on single screen only.

2-6. Play Independent HDD Data on PC

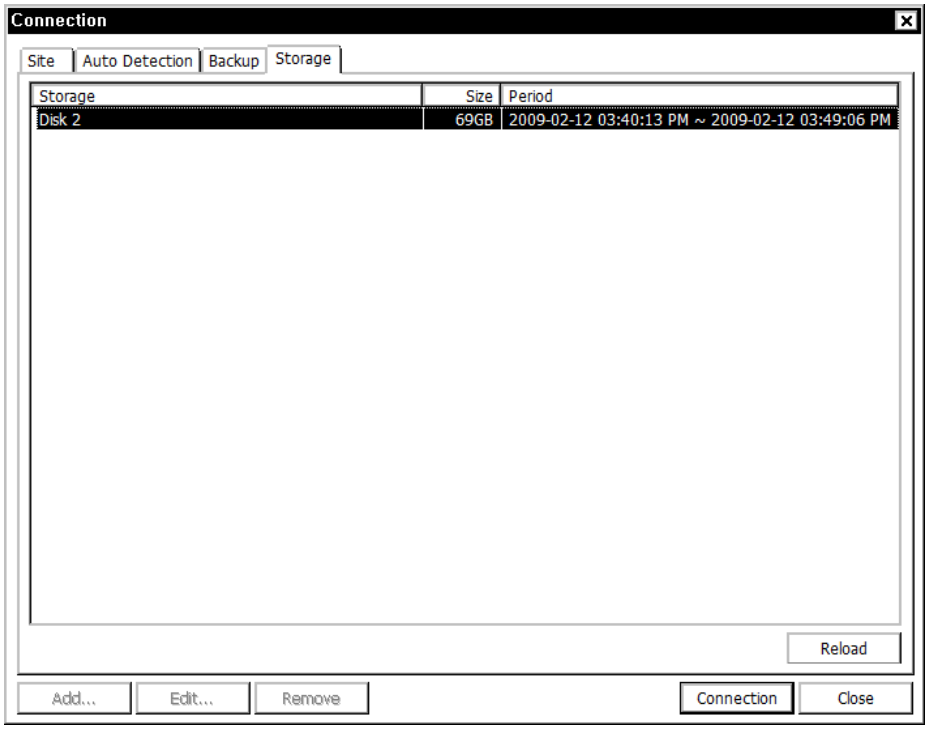

Independent HDD (removed from a DVR) data can be played on PC using Nemon S/W. Have the HDD connected to PC using a SATA to USB connector cable. Make sure the HDD is connected to PC properly

Select button during the playback. Click [Storage] tap to display HDD information (if HDD is not shown please click [Reload] button to refresh the list). Double click the list or highlight and click [Connection] button.

3. Setup

3-1. Nemon Setup

Click on ⚙ and Setup to enter Nemon setup menu.

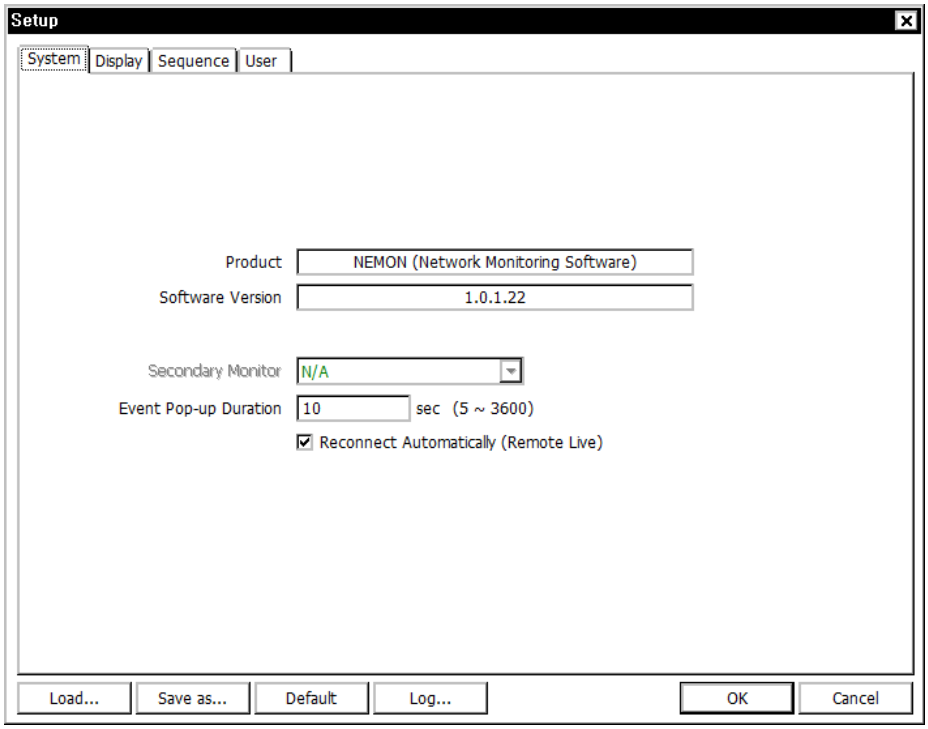

Product: Displays general information of the S/W
Software Version: Displays current S/W version
Secondary Monitor: Select the secondary monitor when using multi monitors on PC
Event Pop-up Duration: Set the time duration for a camera display when it is displayed in full screen mode in case of event.
Reconnect Automatically: Set auto reconnection on Live if the connections is ended by any chances.

Load: Load saved data for settings for remote software
Save as: Save current settings of remote software
Default: Set default settings of remote software
Log...: Displays the history of S/W usage

Click on Display tap to enter display setup menu.

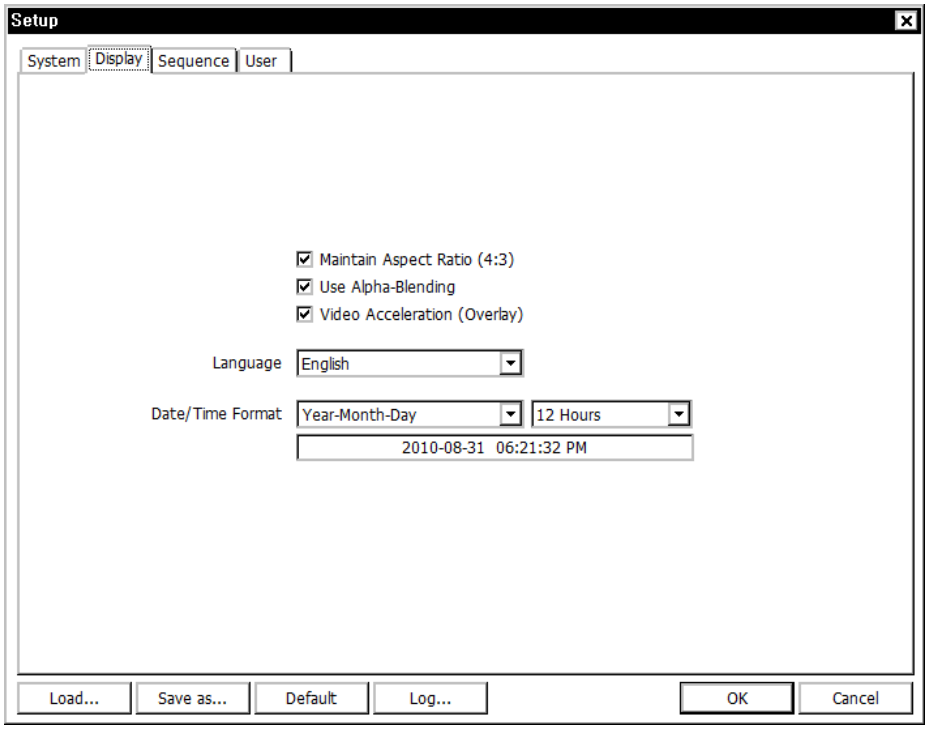

Maintain Aspect Ration (4:3): Keep 4:3 ration on Nemon display screen
Use Alpha-Blending: Enables alpha-blending effect to S/W UI
Video Acceleration: Video Acceleration option enhances natural live image display on the client S/W. Please do not select this option as it may cause improper live image display. Some PC graphic card does not support and comparable with Video Acceleration option.

Note: There are some graphic cards do not support such functions. In this case, unselect the option as it might result in abnormal system operation

Language: Select language option for the remote software
Date/Time Format: Select Date/Time Format for the remote software

Click on Sequence tap to enter sequence setup menu.

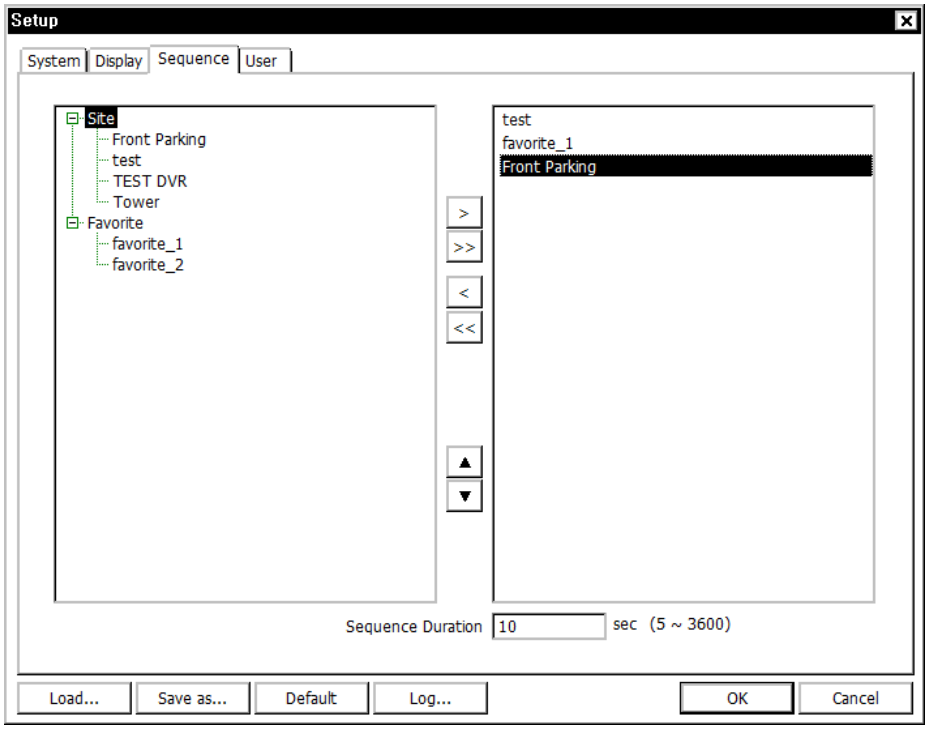

Set sequence mode and sequential sites from registered individual or Favorite sites. Click the site and select [>] button to add the site into the sequencing list. [>>] button will move the all sites to into the sequencing list.

Sequence Duration: Set sequence interval time.

Click on User tap to enter user setup menu.

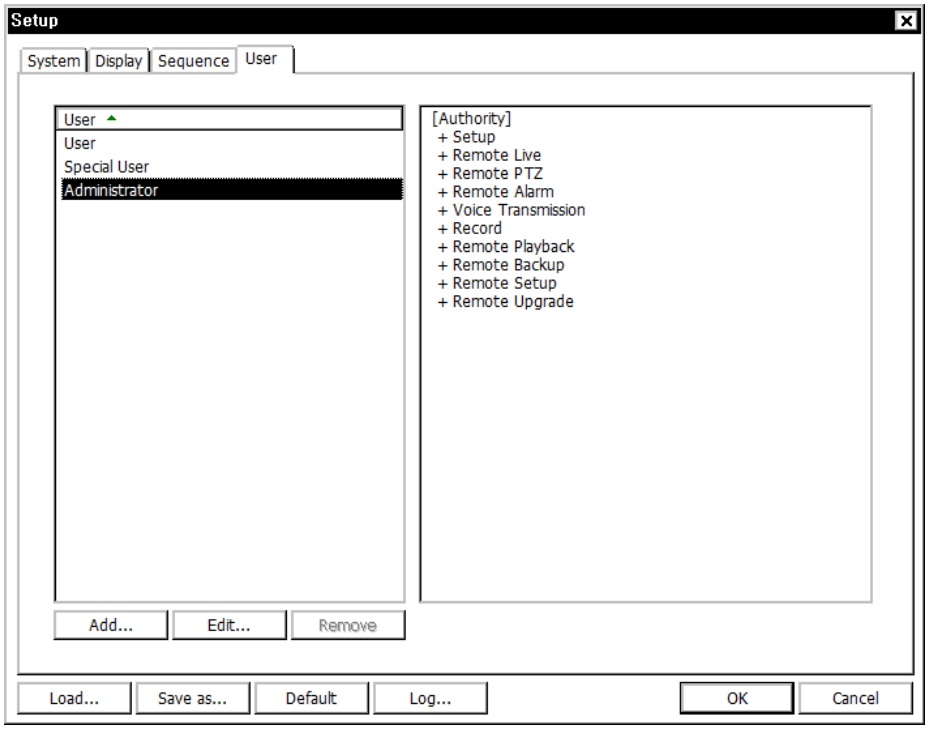

Register Nemon Software users. Each user needs to use the password they set in registration when they log in. Select Add to start new user registration.

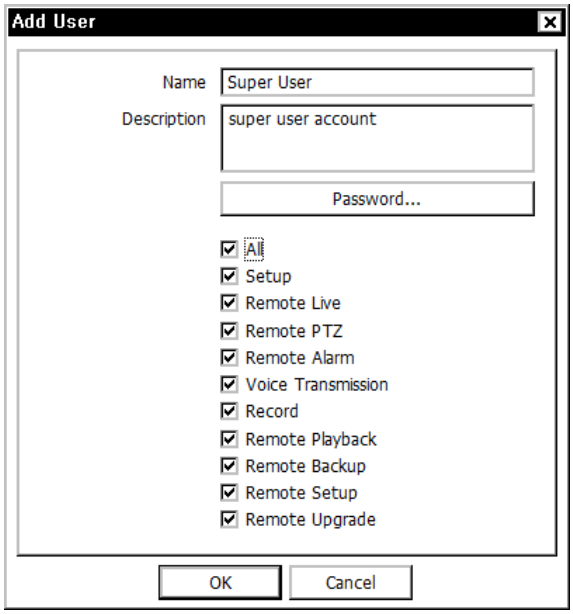

3-2. Remote Setup

Click on ⚙ and [Remote Setup] to enter remote setup menu.

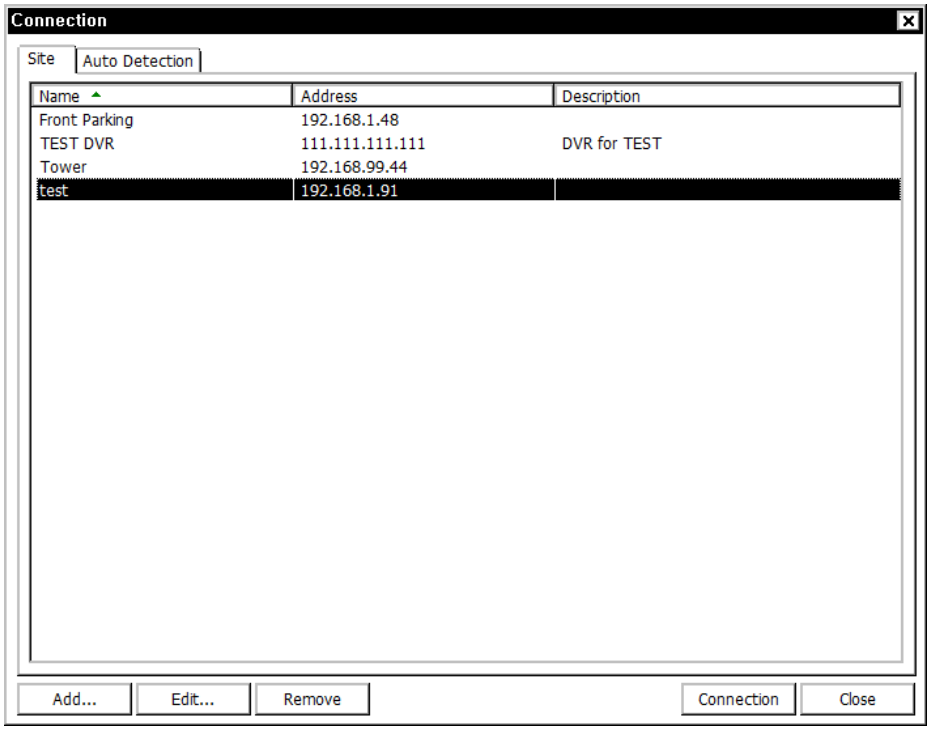

Select a DVR for setup and select Connection button. Setup menu will appear as show below once it is connected

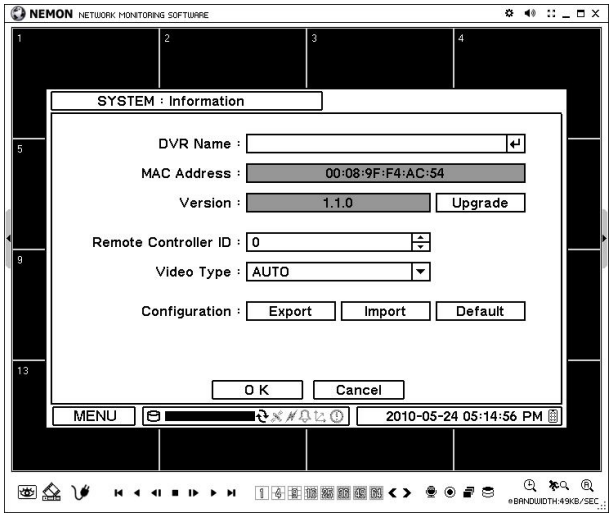

Note: The remote software provides interactive setup system that allows easy local DVR settings from remote sites. It gets exactly same menu and options as the local system.

3-3. Remote Upgrade

The system upgrade can be done through Nemon program on PC.

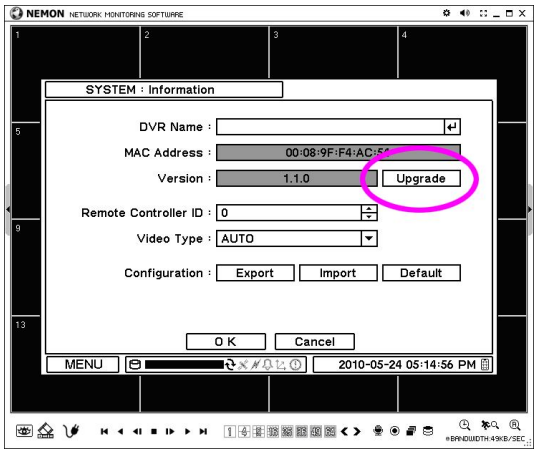

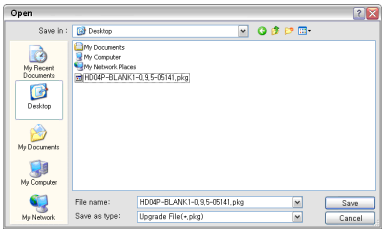

- Click on ⚙ and [Remote Setup] to enter remote setup menu.
- Select Information under System.
- Click [Upgrade] next to S/W version to find a file for upgrade
- Select the file location and the file to upgrade the system.

Note: Please do not close down Nemon S/W or power off a computer until the system upgrade is completed.

4.Nemon Callback

Start-> Program -> Nemon2 -> Nemon Callback2

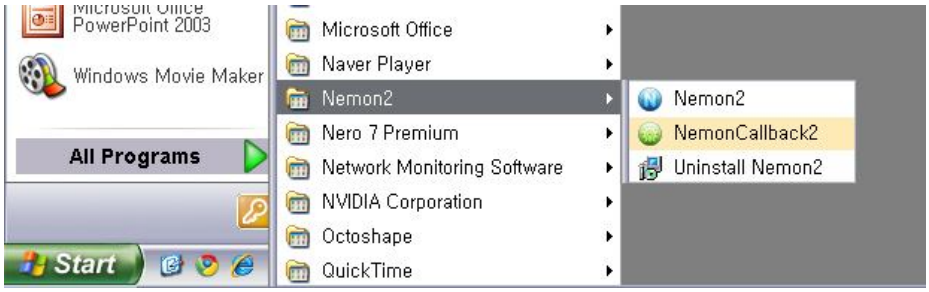

Nemon Callback icon will be displayed on the bottom right of Window once the program starts.

Callback message will be displayed/notified as shown above.
Click Nemon Callback icon to display main window of Callback as shown below.

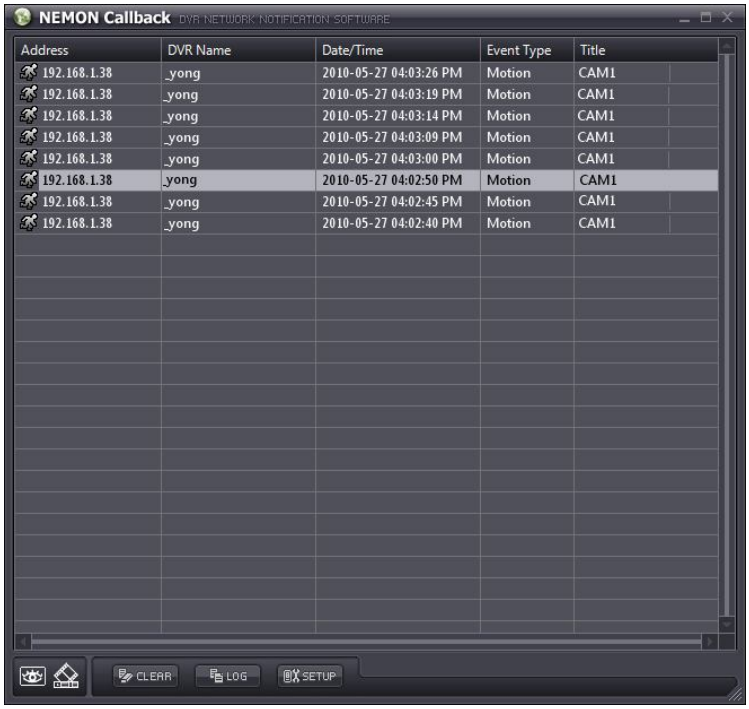
NEMON Callback
DVR NETWORK NOTIFICATION SOFTWARE
Address
DVR Name
Date/Time
Event Type
Title
192.168.1.38 _yong 2010-05-27 04:03:26 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:03:19 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:03:14 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:03:09 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:03:00 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:02:50 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:02:45 PM Motion CAM1
192.168.1.38 _yong 2010-05-27 04:02:40 PM Motion CAM1
CLEAR
LOG
SETUP

Select a log from the list and click Live or Playback icon image to connect related DVR.

Clear: Clear all the logs listed on Nemon Callback window
Log: Click Log button to display log search window as shown below.

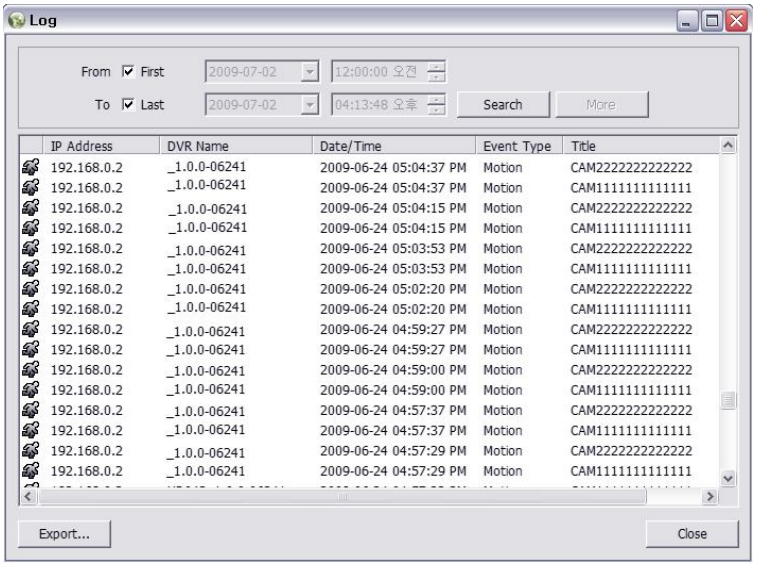

Up to 100,000 log can be saved. 1,000 log lists will be displayed per search. Click More button to display next 1,000 logs. Click Export button to save searched logs in either txt or csv format.

Setup: Click Setup button to set a port for Callback. Check Run Callback at Startup of the System box to start Callback program automatically with Window.

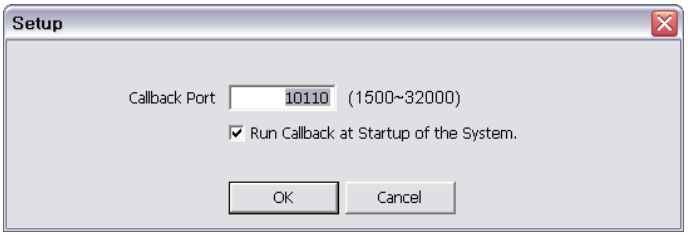

Note: UDP port needs to be set (open) to transmit Callback if Firewall is being used.

Appendix A. Remote Access Using I.E.

DVR can be accessed remotely using Internet Explore. Execute internet explore program and enter DVR address (e.g. IP) to get connected.

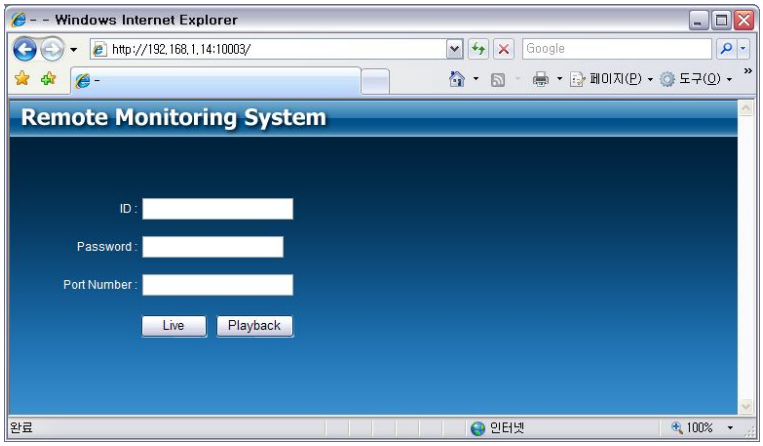

Remote Log In page appears once connected to DVR. Enter ID, PW and Port information, and select Live or Playback mode to display desired remote control option. Please install Active X when Internet Explore displays Active X installation message.

Remote Monitoring

Remote Playback

Please refer to the remote program 'Nemon' manual if further instructions on the control option are needed.

Note: Web is supported only on Internet Explorer 7.0 or above.

Appendix B. How to set DDNS using router

(Except using public IP or connect with ADSL directly)

Make it easy to understand through the example as below. Please refer the Diagram and follow this instruction. For example, If you connect 3 DVRs through local Network.

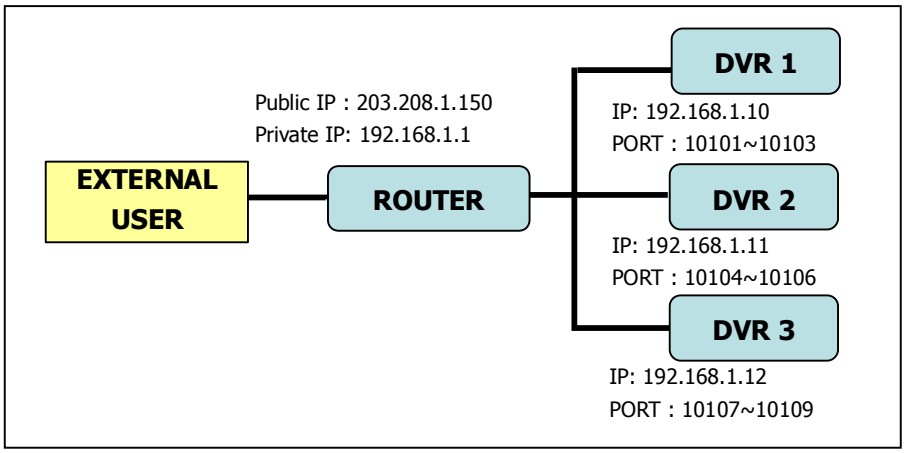

1. Domain Name Creation

- Go to http://www.dvr-ddns.com/
- Click 'Sign up!' to make the Account.

- Fill out the registration information as below.
- Click 'Submit' to make the account.

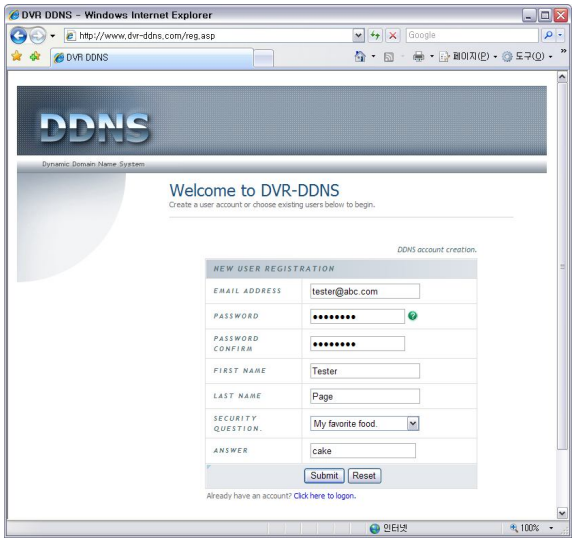

- Enter your domain name and click 'Request Domain' to create the domain name.

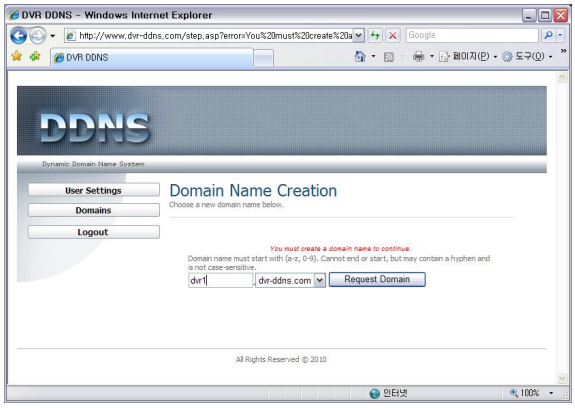
DVR DDNS - Windows Internet Explorer
DDNS
Dynamic Domain Name System
User Settings
Domains
Logout
Domain Name Creation
Choose a new domain name below.
You must create a domain name to continue.
Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.
dvr1
dvr-ddns.com
Request Domain
All Rights Reserved © 2010

- You can see the registered dome name "dvr1.dvr-ddns.com"

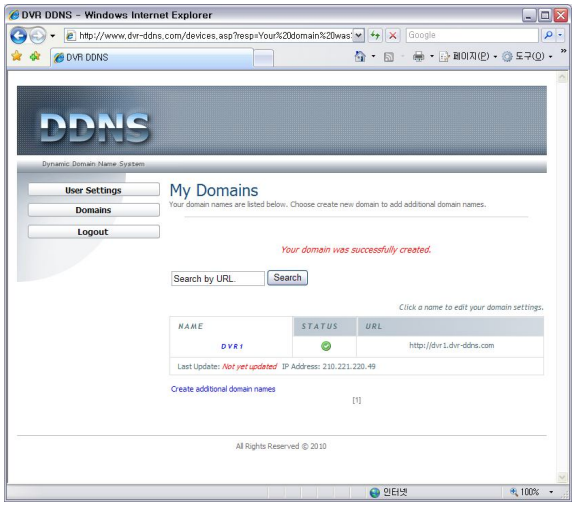

- You can create 3 domain names for one account.
- Click "Create additional domain names" to make another domain name.

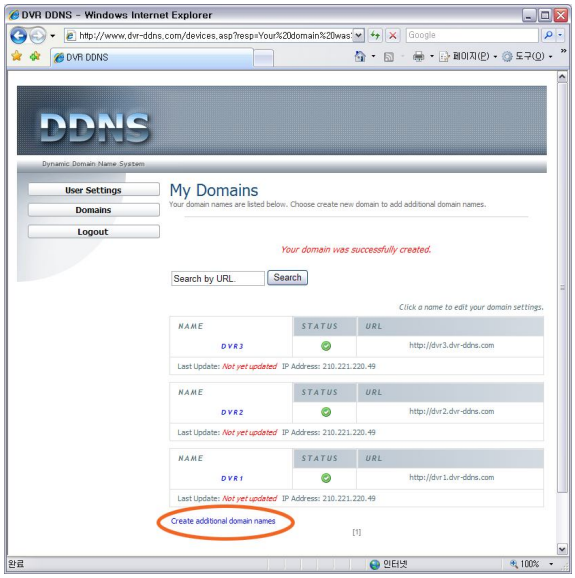

2. Router Configuration

- Insert the gateway address on the explorer to connect the homepage for the Router.
  - Go to "Port Forwarding" Menu. (The picture below is for particular Router.)

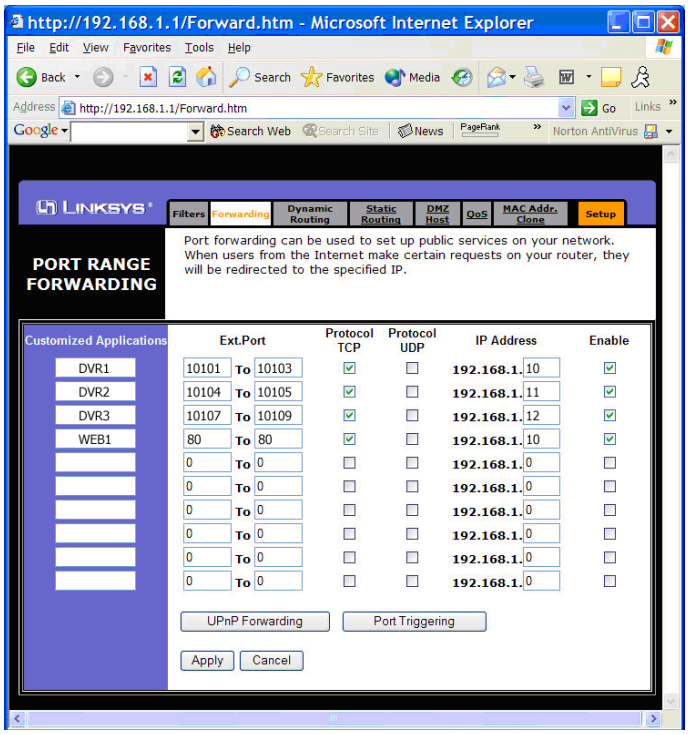
http://192.168.1.1/Forward.htm - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Address http://192.168.1.1/Forward.htm
LINKSYS
Filters Forwarding Dynamic Routing Static Routing DMZ Host QoS MAC Addr. Clone Setup
PORT RANGE FORWARDING
Port forwarding can be used to set up public services on your network. When users from the Internet make certain requests on your router, they will be redirected to the specified IP.
Customized Applications
Ext.Port
Protocol TCP
Protocol UDP
IP Address
Enable
DVR1 10101 To 10103 192.168.1.10
DVR2 10104 To 10105 192.168.1.11
DVR3 10107 To 10109 192.168.1.12
WEB1 80 To 80 192.168.1.10
UPnP Forwarding
Port Triggering
Apply
Cancel

- Please insert the IP address and Port number for DVR in the Port Forward menu.
- The Port number which you insert at this point make it possible to distinguish each of DVRs
- Specify the WEB port number to access the DVR with Internet Explorer. Default port number is 80.

3. DVR Configuration

Example of DVR Network setting.

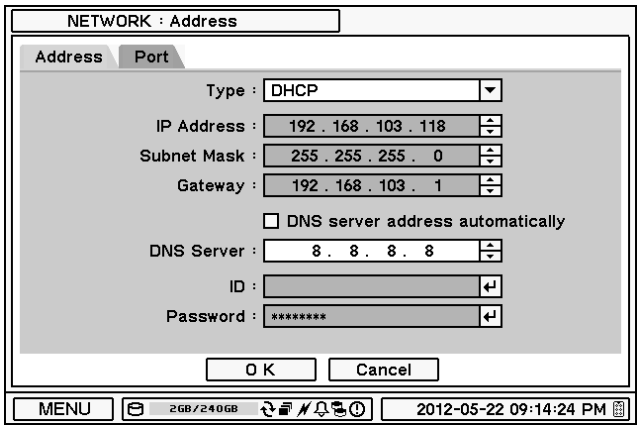

Select Static IP option and enter following options accordingly. The system should be allocated with individual IP address.

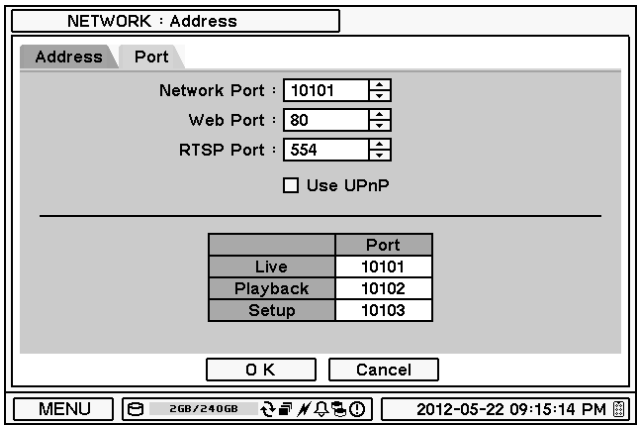

Make sure the ports for DVR are all set accordingly or set network ports according to DVR port settings.

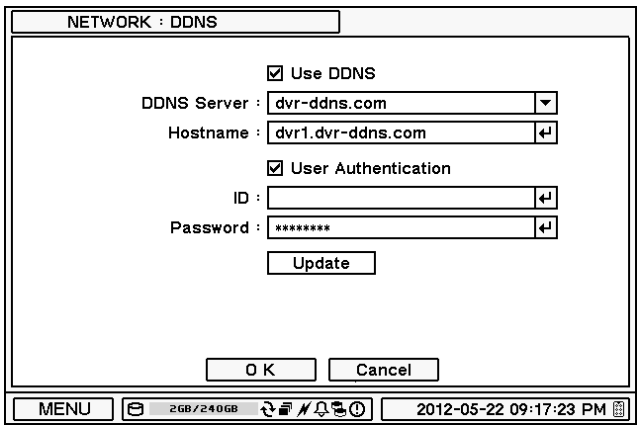

DDNS can be used once the system is registered on DDNS server. ID and PW are required for the registered server authentication.

Appendix C. Digital Signage Maker

Digital Signage Maker converts any video files into DVR's Digital Signage format (JPG).

Digital Signage Maker Options and Limitations. (Before/After Conversion)

	Video File	Digital Signage File
Conversion	Video Files	JPG
File Name	No Limits	Filename_00001.JPG, Filename_0002_JPG ~
File Size	No Limits	256KB per each JPG File
Video Type (Size)	No Limits	Select either NTSC (704 x 480) or PAL (704 x 576)
FPS	No Limits	15 FPS only
Supported File Extensions	All File Extension except JPG, BMP, and JPEG is supported	JPG
Supported Codecs	MPEG(Moving Picture Experts Group) MOV(QuickTime) AVI(Audio Video Interleaved). WMV DAT ASF MP4 Etc.	JPG

How to use Digital Signage Maker

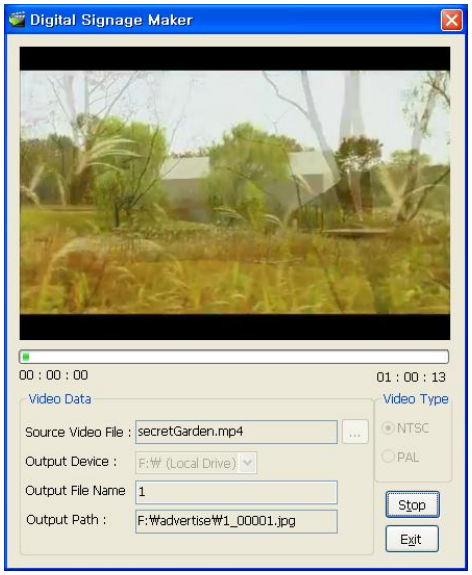

a. Select Source Video File

Files with extensions such as JPG, BMP, JPEG are not supported.
Please refer to above list for right file formats.

b. Select Output Device

Existing Logical drive or Removable device is displayed as Drive Name.
DeviceName advertise is a default file folder name that MUST be changed or renamed.
If the ₩advertise folder is already created, it doesn't make a new folder and overwrite the existing one.

c. Enter Output File Name

Enter file name. The file name is automatically created with numbers in order as follow:

E.g. filename_000001.jpg, filename_000002.jpg and ……..

d. Select Video Type

The file can be saved as NTSC(704 x 480) or PAL(704 x 574) according to Video Type. But this does not affect the display resolution.

e. Click Start Button

Click the start button. Play time and End time of Video File are shown under progress bar.
The Video conversion process will be displayed on the window.
If Stop the process during the conversion, it will end and complete the conversion process up to the stopped point.

F. Import Digital Signage File into DVR

Create a folder by name of 'advertise' and same the files in that folder in USB flash memory. Files must be saved in the folder and the folder name should be 'advertise'. DVR will not recognize any other folder names. Once it is done, connect USB flash memory to DVR and follow Digital Signage instructions (Import) to use Digital Signage features.

(refer to Chapter 3. 2-3-4. Digital Signage for the detail)

Appendix D. PFRM Instructions

(PC Free Remote Monitoring)

1. Outline

It allows a direct remote connections on LIVE/PLAYBACK between DVRs without a PC by connecting a DVR remotely from another DVR.

Note:

- PFRM supports its feature in same models and later models are not applied.

  NUBIX8RT –> NUBIX4RT (connecting is available) NUBIX16RT (not available)

  NUBIX16RT –> NUBIX8RT & NUBIX16RT (available)

- Audio and PTZ are supported. (Supports Audio in single screen mode)

- Text-in Scroll is not supported.

- Backup option is not supported on Remote Playback.

- Auto Detection is not supported.

2. How to connect

A. Live & Playback Mode

Follow the direction "Remote -> Live or Playback" in Contextual Menu on Live.

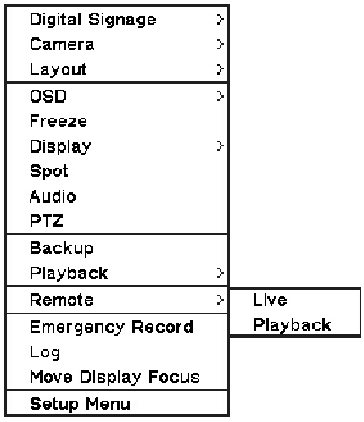

The system is switched to Remote Live or Playback Mode and the list of Remote Site(up to 100 sites) is displayed on the screen.

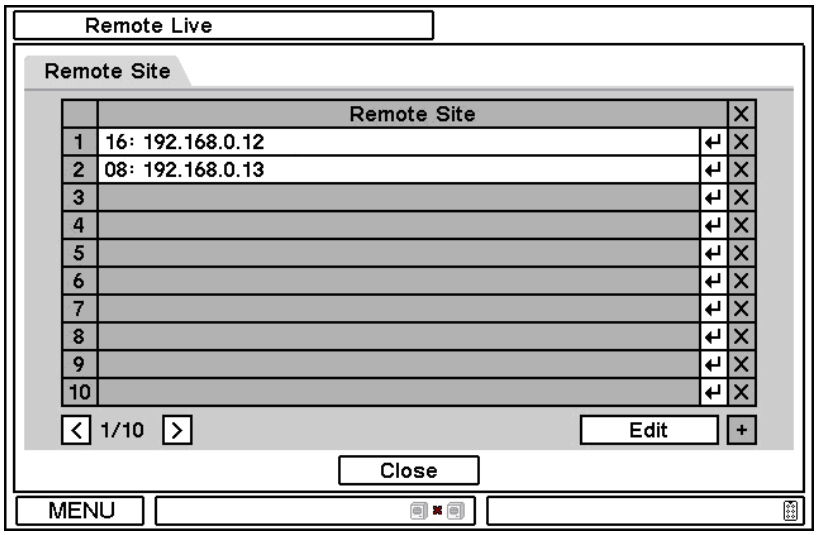

Select a site that user wants on the Remote Site List. By selecting Edit button, user can add Remote Site by pressing [+] button or delete the site by [X] button.

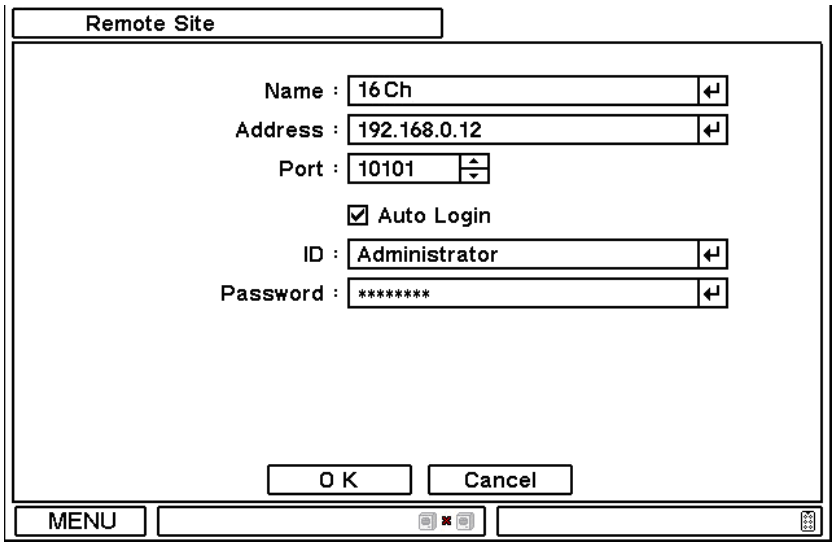

Name : Enter the Site name.
Address : Enter the Site address for Remote DVR.
Port : Enter Port for the site. It depends on the network setting of the local site.
User / Password : Enter User and Password to log in. User has to be set with authority of Network.

After the editing is done, click Done button.

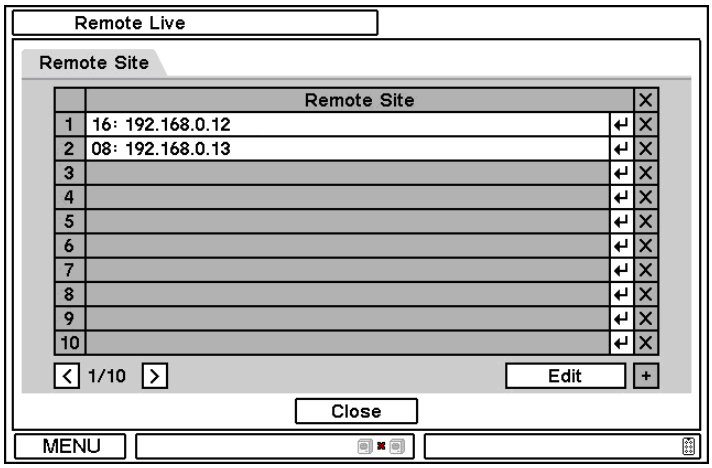

B. PTZ Mode

Click the right button of the mouse or the arrow shape in the middle of remote controller on Remote Live Mode and select Remote PTZ.

Appendix E. NEMON Network Archiver Instructions

1. Outline

NEMON Network Archiver is a Remote Archiving Program to keep recorded data from DVRs on remote sites via Network.

2. Feature

The S/W can be used without any additional upgrade of the DVRs.
Archiving can be simultaneously performed with multi sites registered.
The S/W offers flexible storage management by creating, adding or deleting Storage File as much as user wants regardless of the size and numbers.

3. How to use Network Archiver

Start Network Archiver(Archiving) by using Schedule Wizard(New Schedule).

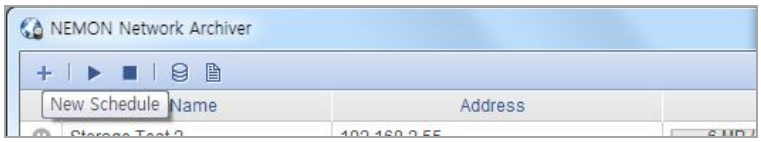

Step 1) Entering Archiving Site address and following information for a site registration and log-in.

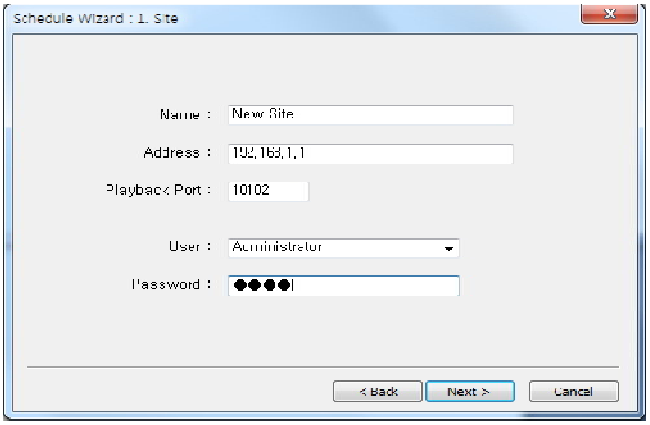

Name : Enter the Site name.
Address : Enter the Site address for Remote Archiving.
Playback Port : Enter Playback Port for the site. The default setting value is 10102 and it depends on the network setting of the local site.

Note: Network Archvier requires to set Playback Port as a DVR for its network connection.

User / Password : Enter User and Password to log in. User has to be set with authority of Network Playback.

Step 2) Selecting a starting point of data for Remote Archiving.

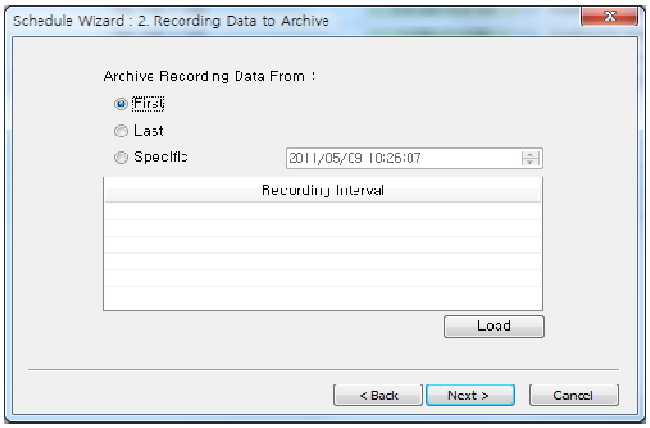

First : Archiving from the very beginning of recorded data on DVR.
Last : Archiving from the latest recorded data on DVR.
Specific : Archiving from designated point by user. If data doesn't exist on the designated point, archiving will start from the latest data right after the designated point.
Load : Shows the status of recorded data on the DVR. It is displayed on Recording Interval List.

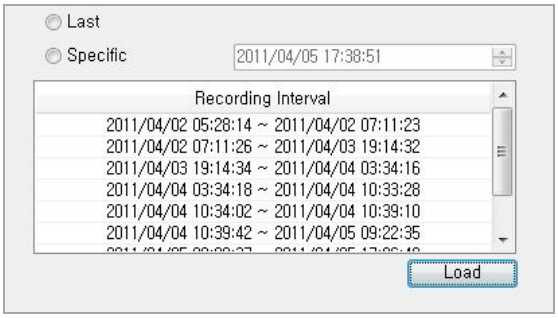

Step 3) Setting performing schedule for Archiving.

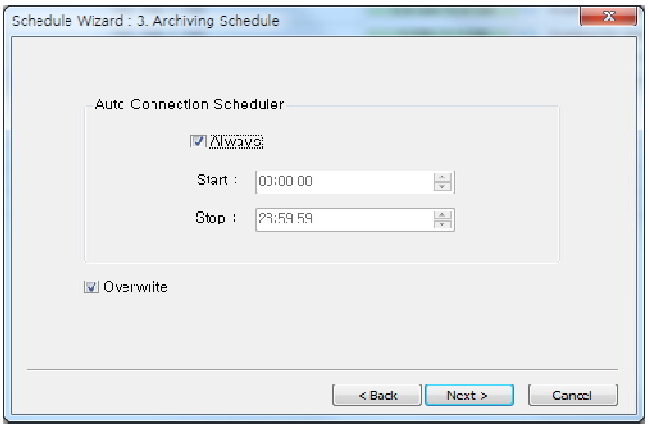

Auto Connection Scheduler : Set a time schedule for Archiving. Select a time for Start/Stop point, the system will automatically perform Archiving as the schedule set. If Archiving is failed due to any causes, it will continuously attempt to re-connect the sites. If Always is selected, Archiving will continue until user stops the operation.

Note: The S/W only attempts to reconnect the site when it is within the Archiving schedule as pre-set.

Overwrite : Select Overwrite to overwrite storage. When it is full, the oldest data is automatically overwritten by the latest data, and Archiving continues.

Step 4) Creating Storage Group. (refer to 4-D for the detail)

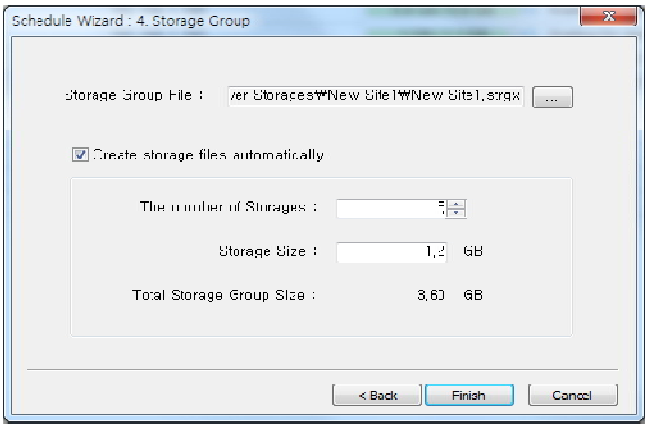

Storage Group File : Set name of new Storage Group File. The default directory is designated to "My Documents NEMON Network Archiver Storages₩<Site Name>₩<Site Name>.strgx".
Create storage files automatically : Select to determine whether to create storage files automatically or not. Storage File can be created individually by Storage Manager (refer to 4-D). The created file is saved in "<Site Name> <Numbers>.strg".

In case of creating storage files automatically, enter the following information.

The number of Storages : The number of Storage Files to be created.
Storage Size : Size of each Storage File. The default setting value is 4GB. It needs to set up with at least 0.5GB or more.
Total Storage Group Size : Total Storage Group Size is equal to (The number of Storages) X (Storage Size).

Archiving will be performed once the setting is completed by clicking "finish" button. Use Schedule Wizard to add new Archiving option.

4. Set Up

A. Main Screen

Each schedule information is displayed on the main screen in real time.
(Overall information of Site and Log-in / Starting point of 'Archiving / Storage Group is considered and called 'Schedule'. Each list is considered as one 'Schedule'.)

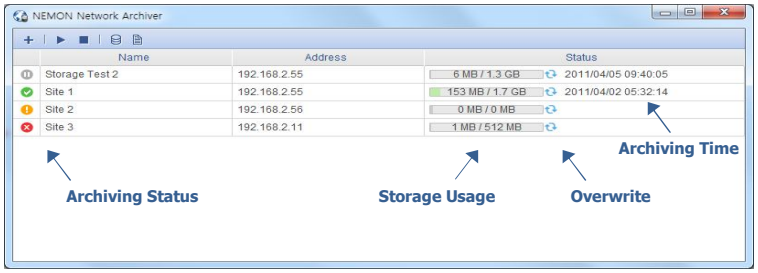

Archiving Status : described with different icon designs. Please refer to below list to understand each icons for different Archiving .

	Archiving is On
	Site being connected
	Pause
	Archiving can't be continued
	Archiving Failed

* The explanation of current status can be displayed with tool tip using a mouse.

Name : Site name designated at Schedule Wizard.
Address : Site address for Archiving.
Storage Usage : Current usage or full capacity of Storage Group used for Archiving. The color of bar graph shows its usage and the transmission status of data being archived.

	Data is being transmitted and Archived without any delays or latencies.
	Data is being transmitted and Archived with some delays or latencies.
	Archiving is stopped

Overwrite : If the icon is in blue, Overwrite option is on.
Archiving Time : It displays the current time of recorded data on DVR for Archiving.

If clicking right button of mouse on each list, it displays contextual menu for the Schedule operations.

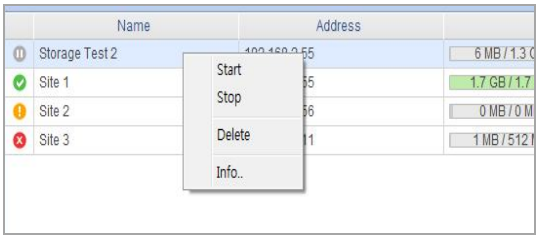

Start : Start selected Schedule.
Stop : Stop selected Schedule.
Delete : Delete selected Schedule. The Schedule can be deleted only when the Archiving is stopped. It is also possible to choose deletion of Storage File from separate Dialog.
Info : Read the detail of selected Schedule. (refer to C. for the detail)

B. Tool Bar

New Schedule (+) : Run Schedule Wizard.
Start All (▶) : Start all registered Schedule. (It doesn't affect the sites where Archiving is already in progress.)
Stop All (■) : Stop all registered Schedule. (It doesn't affect the sites where Archiving is already stopped.)
Storage Manager (⛁): Run Storage Manager. (refer to 4-D. for the detail)
Log (🗎) : Check Log list of each site. (refer to 4-E. for the detail)

C. Detail Information

a. Site

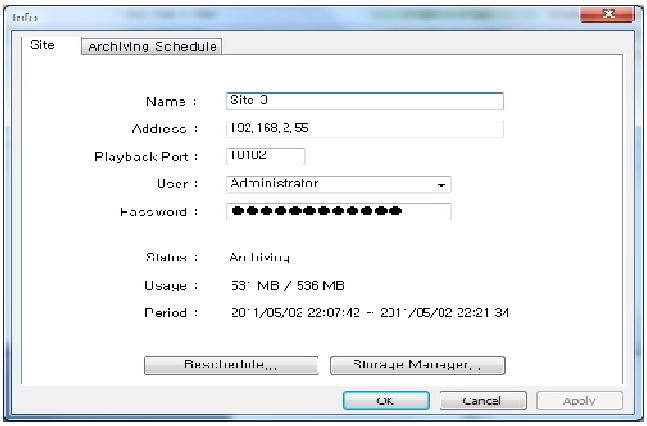

Name / Address / Playback Port / Username / Password : Information on registered Site and Log-in. (refer to 3-Step1 for the detail)
Status : It shows current Archiving status and directly related with Icon on Archiving status of main screen. It is shown as Connecting, Archiving, Stopped, and etc. and when the progress of Archiving is not performed or failed, it displays the cause of failure.
Usage : Usage or full capacity of Storage Group used for Archiving.
Period : Full period of data has been archived.
Reschedule : Reschedule the starting point of Archiving data. The way to do is the same as 3-Step. If new schedule is set, the new schedule will be displayed as shown below.



Storage Manager : Run Storage Manager for the site.

* After modifying information about Archiving such as Name, Address, Playback Port, Username, Password, Overwrite, Reschedule, make sure click Apply button to confirm the changes.

b. Archiving Schedule

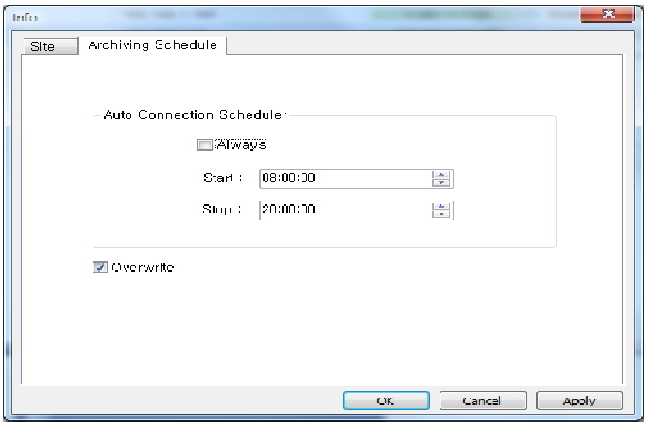

Auto Connection Scheduler : Set time schedule for Archiving. Select time for Start/Stop points. Archiving will automatically be performed as the time set. If Archiving is failed due to any causes, it will continuously attempt to re-connect the sites. If Always is selected, Archiving will continue until user stops the operation.

Overwrite : Select Overwrite to overwrite storage. When it is full, the oldest data is automatically overwritten by the latest data, and Archiving continues.

D. Storage Manager

Manage Storage Group each Archiving schedule.

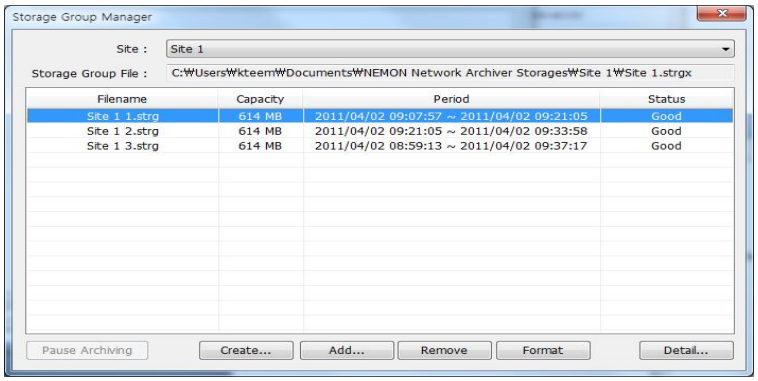

Filename : Name of Storage File. It is possible to check full path where the file is being stored by tool tip when mouse cursor is placed on the Filename.
Capacity : Full capacity of File.
Period : Full period of recorded data on Storage File.
Status : Current status of File.

Good	Able to retreat a file
Not Formatted	Not been formatted
Open Error	Not able to open a file
Not Found	File does not exist

Create : Create new Storage File.
Add : Add existing Storage File.
Remove : Remove selected Storage File. It is possible to choose deletion of Storage File from

separate Dialog.
Format : Format selected Storage File.

* Each site has own ID and the ID is included and hidden on each Storage File as well. If adding Storage File used from other Sites, it recognizes as "Not Formatted" due to different IDs, thus the new Storage needs to be formatted.

* Create/Add/Remove/Format can not be performed for Storage Group under Archiving. Try it after stopping Archiving (Pause Archiving).

Detail : It is available to check the detail section list of the selected Storage File from separate Dialog.

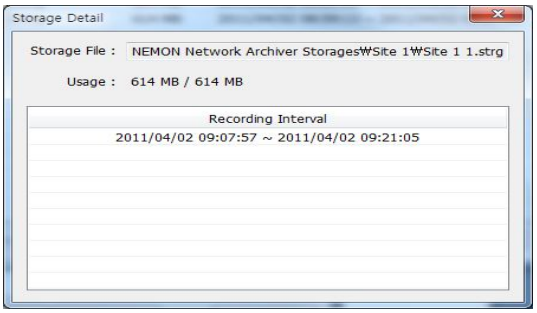
Storage Detail
Storage File : NEMON Network Archiver Storages₩Site 1₩Site 1 1.strg
Usage : 614 MB / 614 MB
Recording Interval
2011/04/02 09:07:57 ~ 2011/04/02 09:21:05

E. Log

Check the Log status of each Schedule.

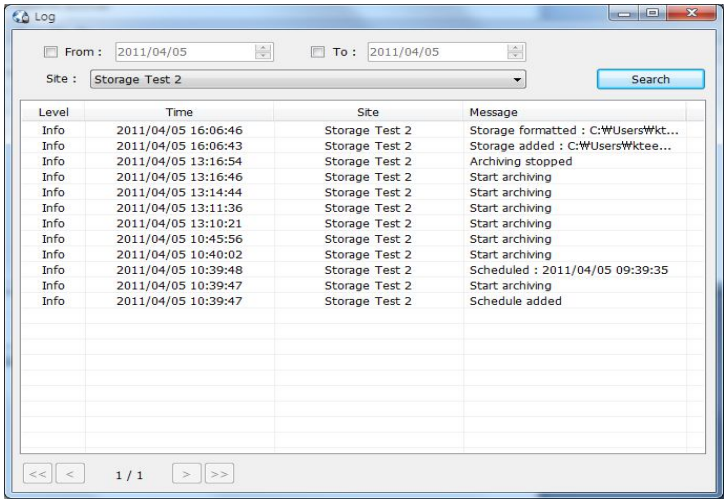
Log
From : 2011/04/05
To : 2011/04/05
Site : Storage Test 2
Search
Level Time Site Message
Info 2011/04/05 16:06:46 Storage Test 2 Storage formatted : C:₩Users₩kt...
Info 2011/04/05 16:06:43 Storage Test 2 Storage added : C:₩Users₩ktee...
Info 2011/04/05 13:16:54 Storage Test 2 Archiving stopped
Info 2011/04/05 13:16:46 Storage Test 2 Start archiving
Info 2011/04/05 13:14:44 Storage Test 2 Start archiving
Info 2011/04/05 13:11:36 Storage Test 2 Start archiving
Info 2011/04/05 13:10:21 Storage Test 2 Start archiving
Info 2011/04/05 10:45:56 Storage Test 2 Start archiving
Info 2011/04/05 10:40:02 Storage Test 2 Start archiving
Info 2011/04/05 10:39:48 Storage Test 2 Scheduled : 2011/04/05 09:39:35
Info 2011/04/05 10:39:47 Storage Test 2 Start archiving
Info 2011/04/05 10:39:47 Storage Test 2 Schedule added
<< < 1 / 1 > >>

F. System Tray

The program icon (System Tray) is located as shown below. Network Archiver provides System Tray. Find the System Tray in order to shut down Network Archivier safely and completely.

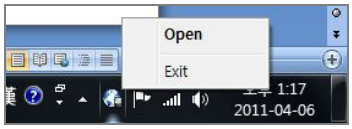

5. Reference

a. Storage Playback to utilize Nemon2

Each Storage File(.strg) and Storage Group File(.strgx) can be played on Nemon2. Playback all Storage Files linked and belong to the Storage Group at once.

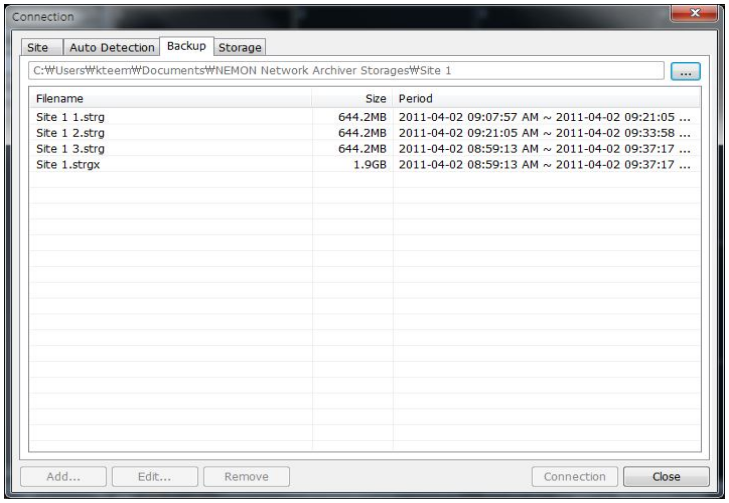

b. Restrictions

1. Storage File which is being used by Network Archiver can not be playback at the same time on Nemon2. On the contrary, Storage File which is being used by Nemon2 can not be used on Network Archiver.
2. Archiving progress occupies one Playback Connection of the site.
3. Full capacity of Storage File has to be at least 0.5GB or more.
4. Path for the first created Storage Group File by Schedule Wizard cannot be changed once it is created.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.
THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product (Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

ROHS Compliance